ROPOX
Better ways to better days

Evocare
www.evocare.com.au
Ph: 07 3355 8000 Fax: 07 3355 5043
Email: sales@evocare.com.au

Ropox Support Washbasin Electric

MOUNTING INSTRUCTIONS

Keep this manual with the product at all times

PDF 6123/ 01.01.2016

Mounting must always be carried out by competent personnel

Before starting installation, check that all parts mentioned in the list of components have been delivered.
See list of components from page 31.

Ropox Support Washbasin Electric is available in two models:

Left page 3

Right page 17

NOTE:
When mounting screws in the wall, always consider the strength and nature of the wall. The screws provided are only intended as a guide for installation on a reinforced wall with a view to the specified maximum loads on screws.

© ROPOX 2014

Support Washbasin Electric, left

40-44016

NOTE:
Make sure the washbasin does not get scratched while upside down.

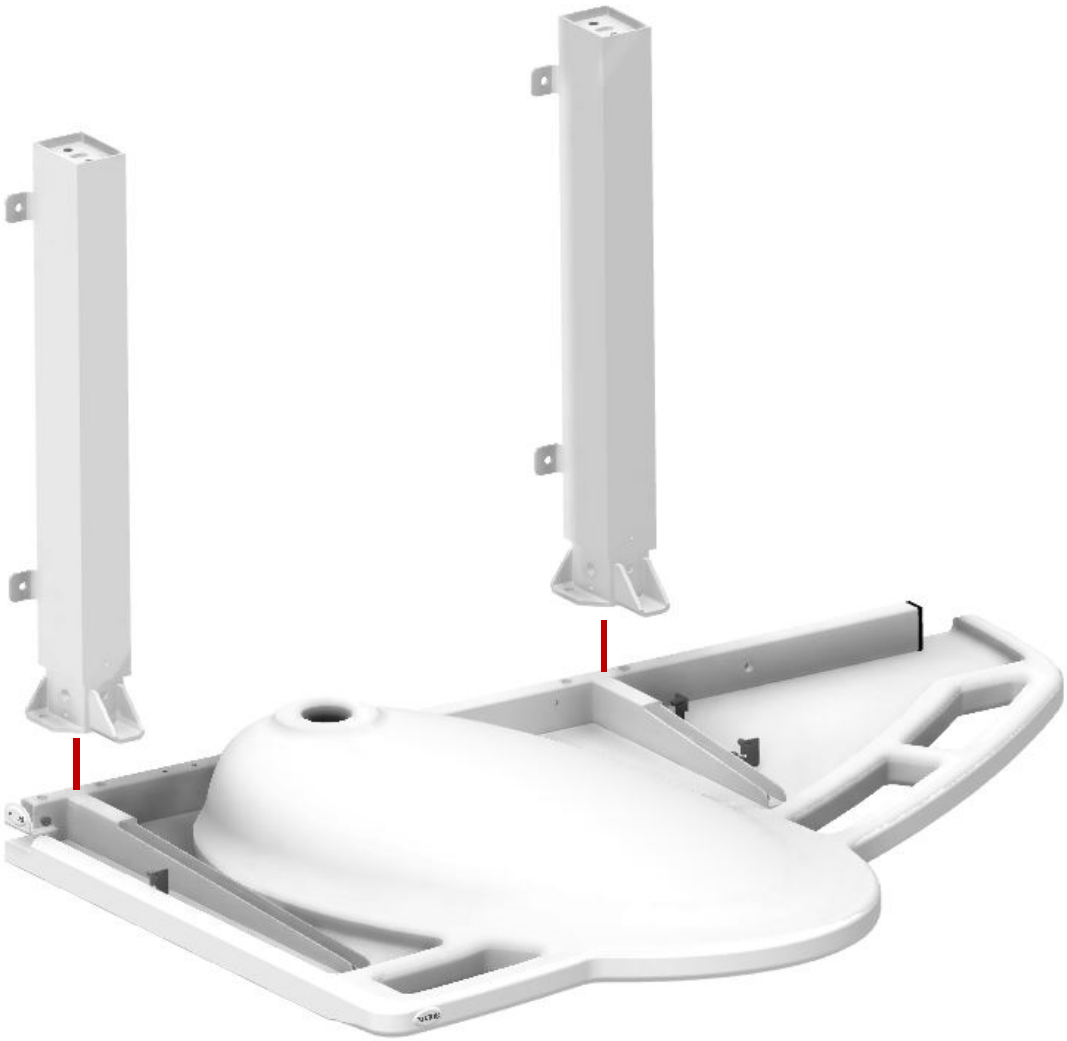

© ROPOX 2014

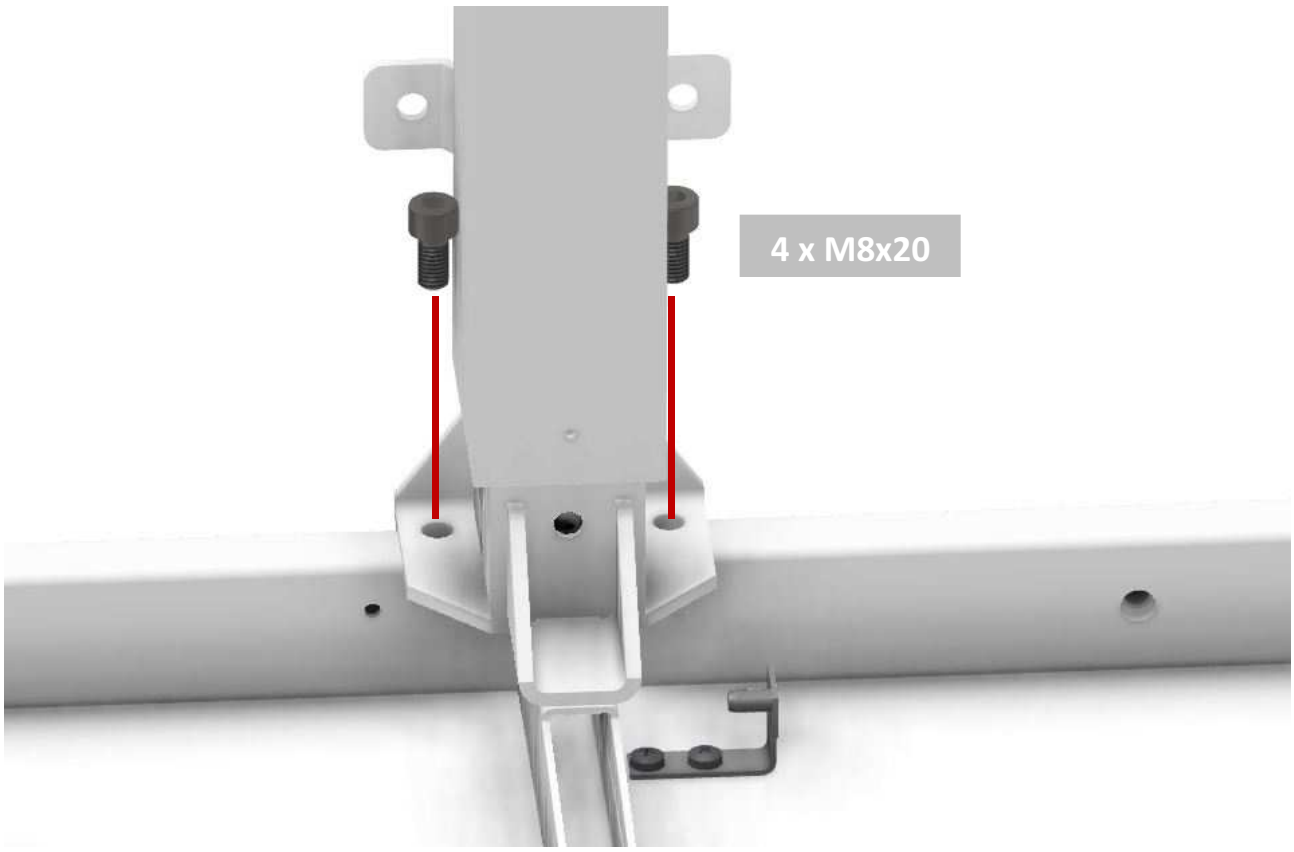

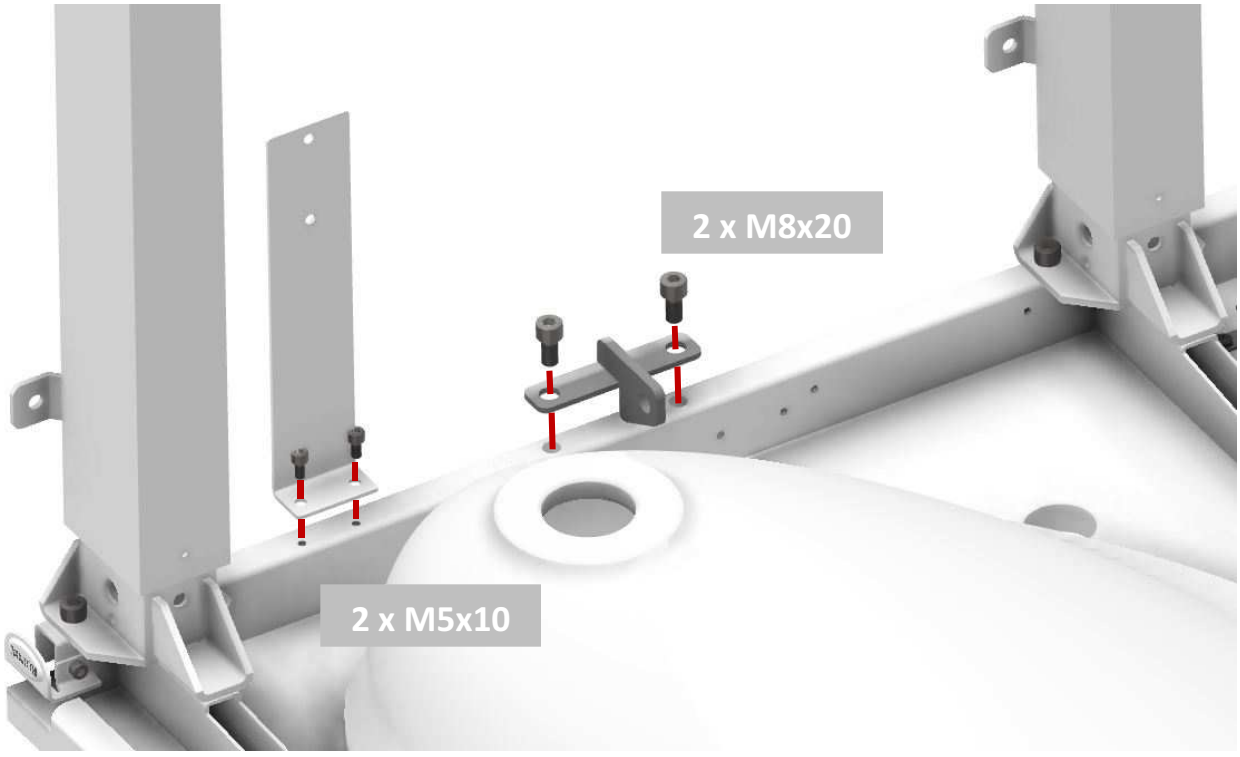

© ROPOX 2014

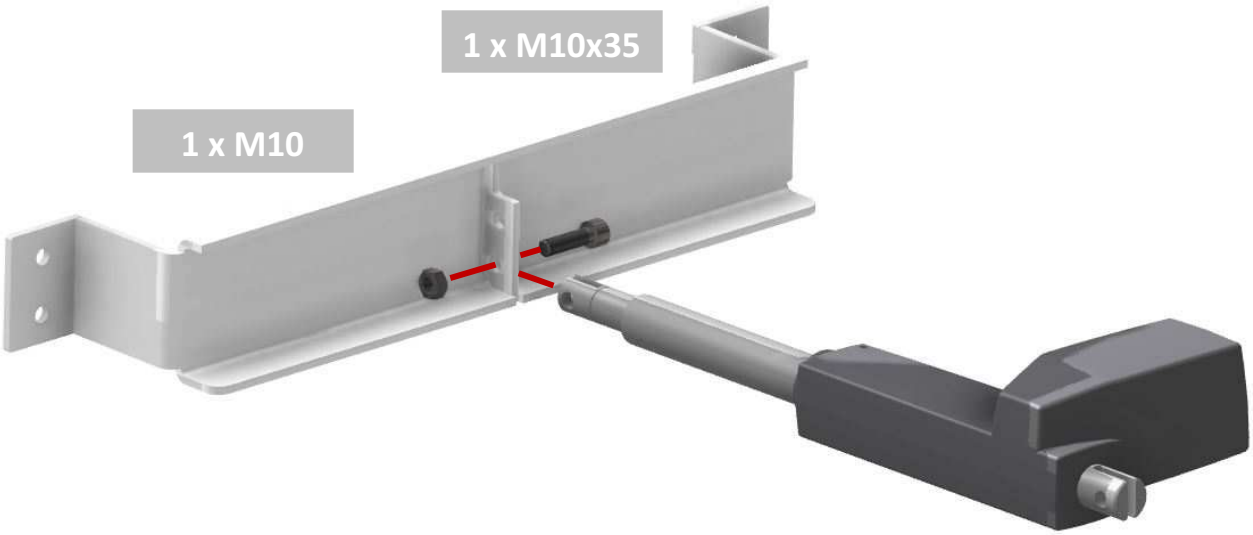

© ROPOX 2014

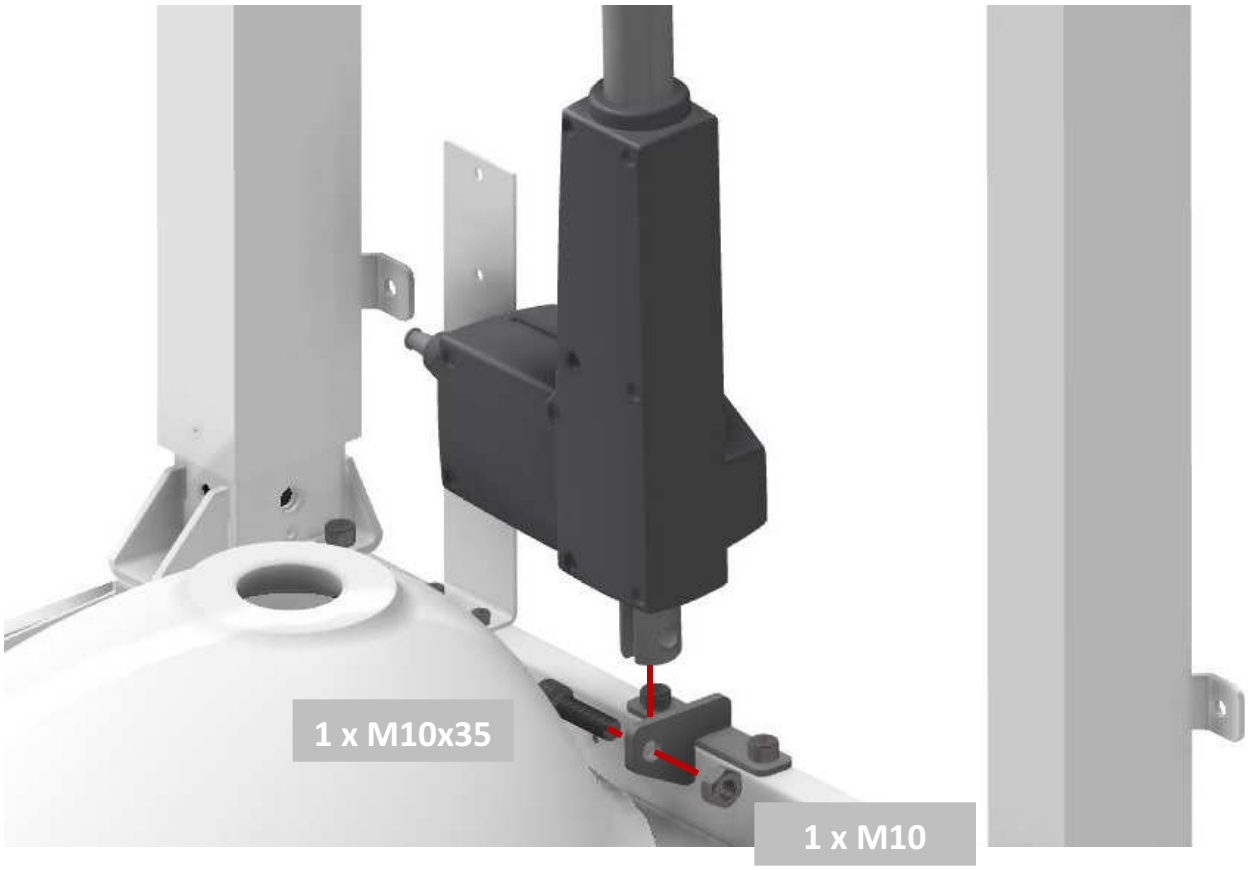

© ROPOX 2014

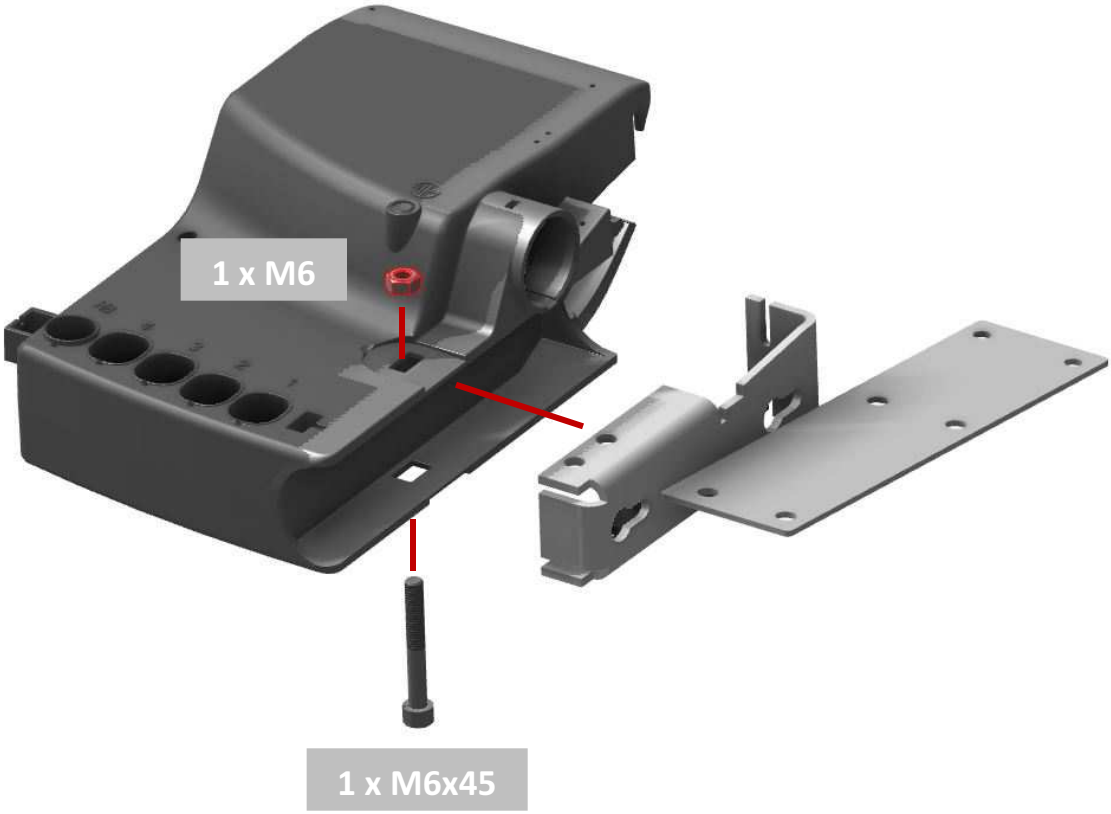

© ROPOX 2014

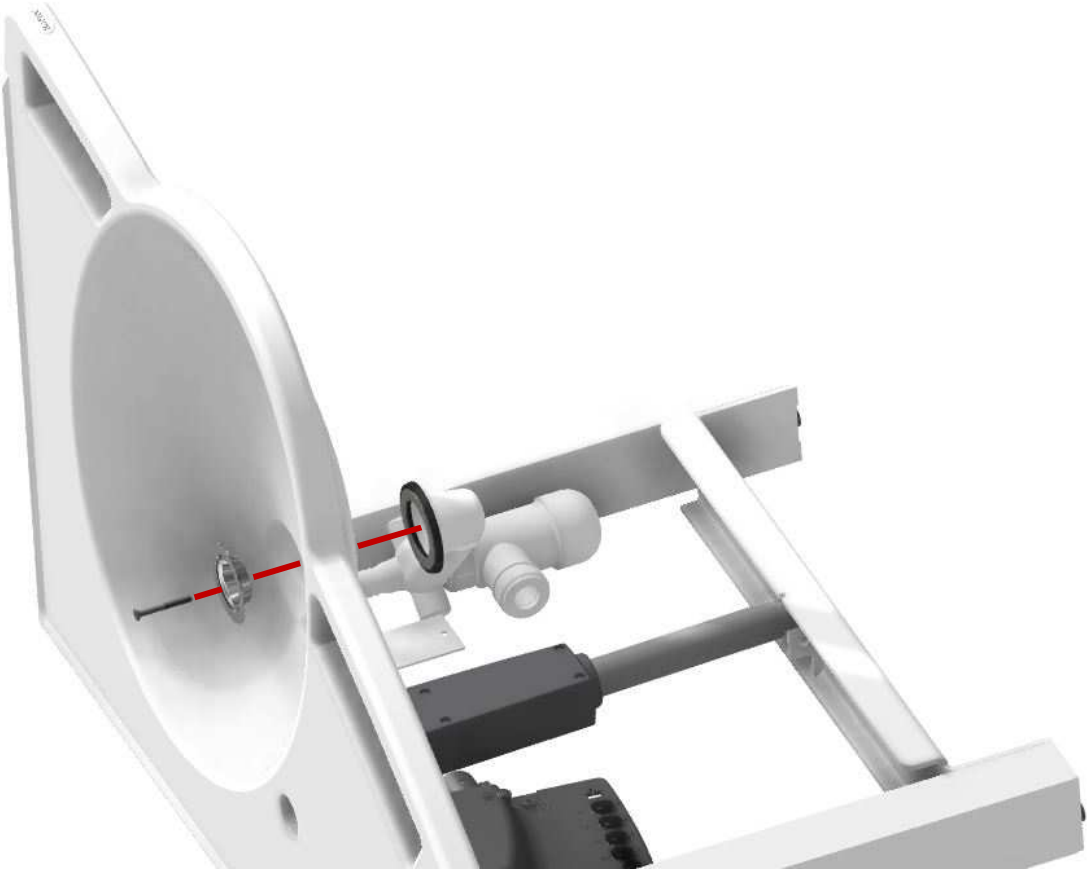

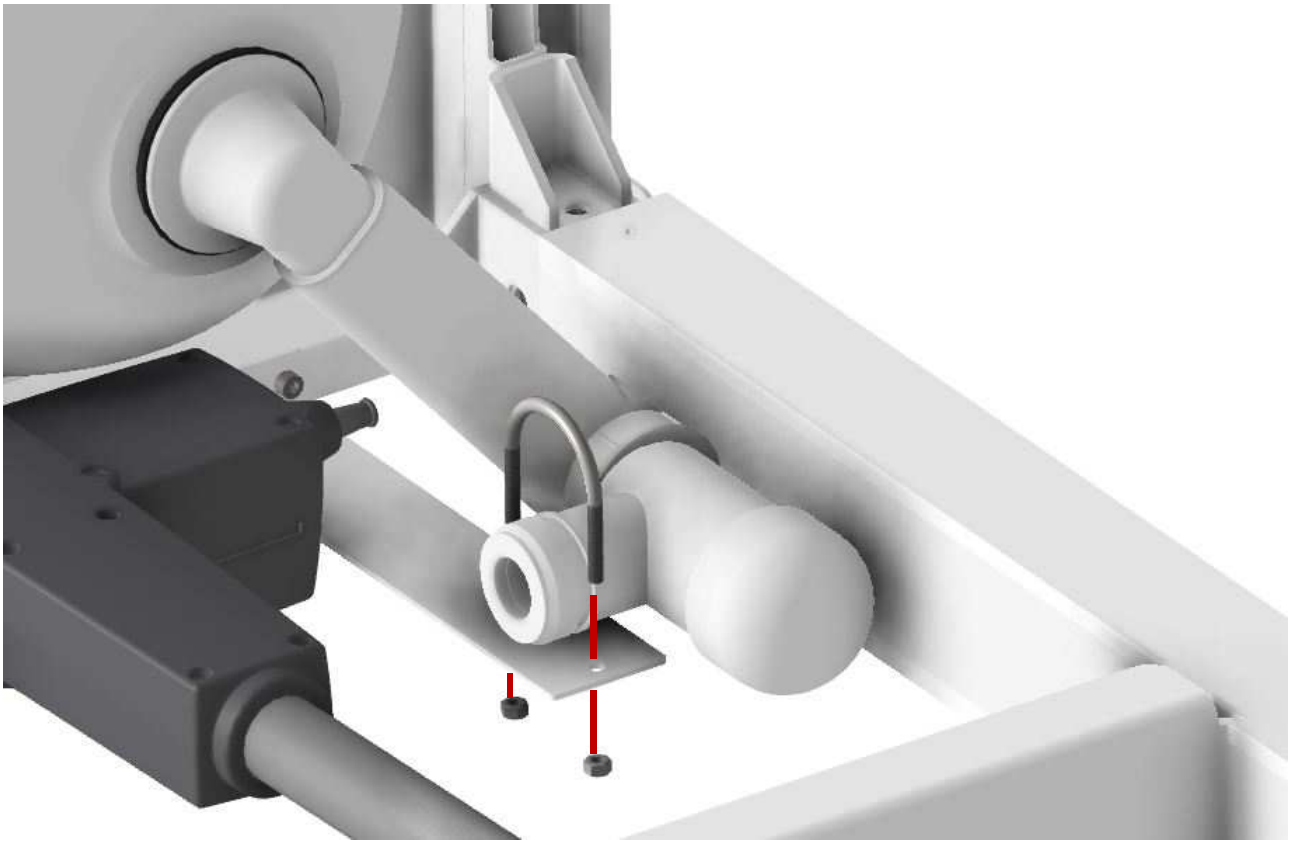

© ROPOX 2014

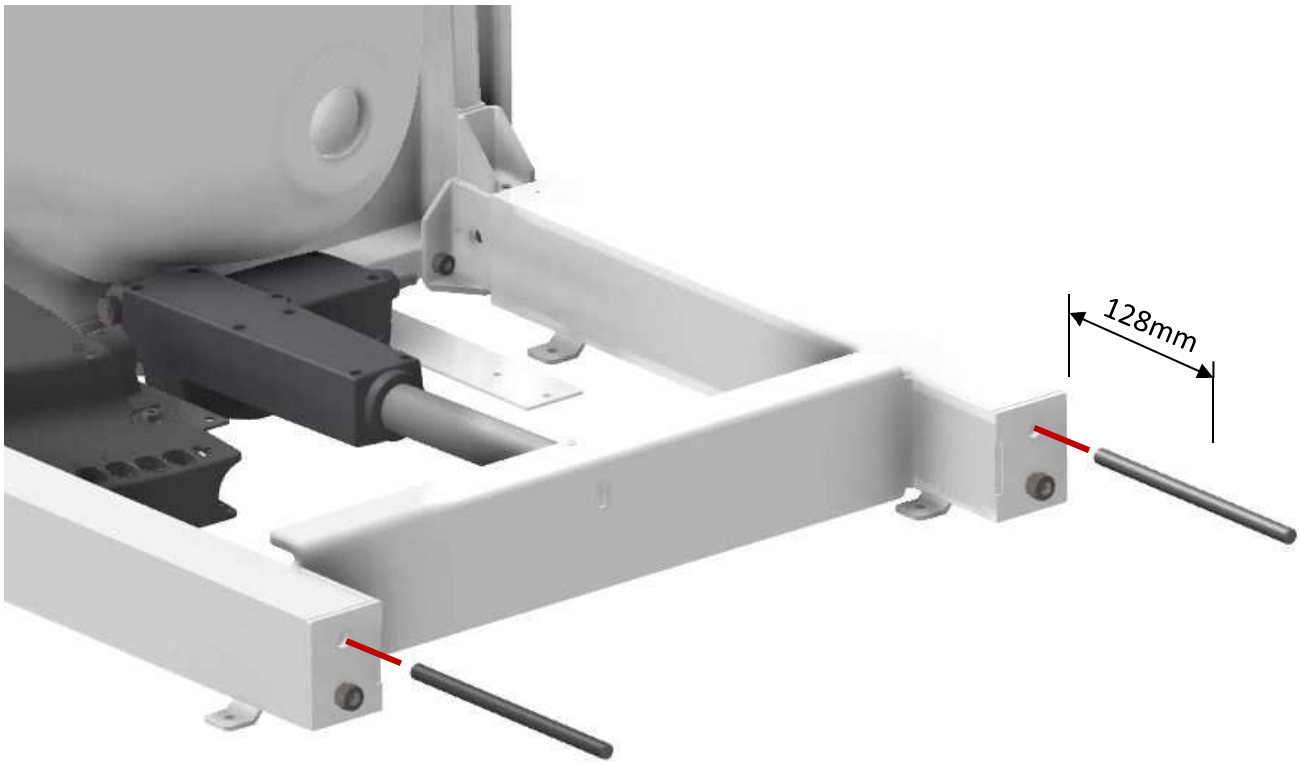

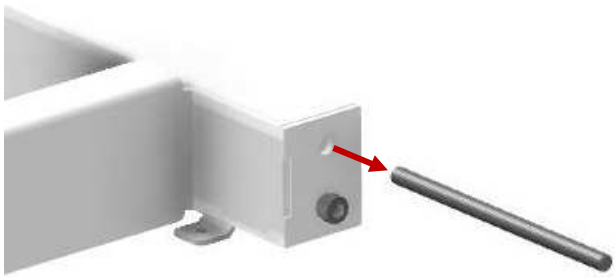

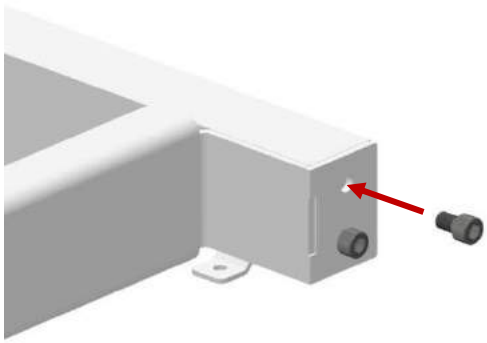

© ROPOX 2014

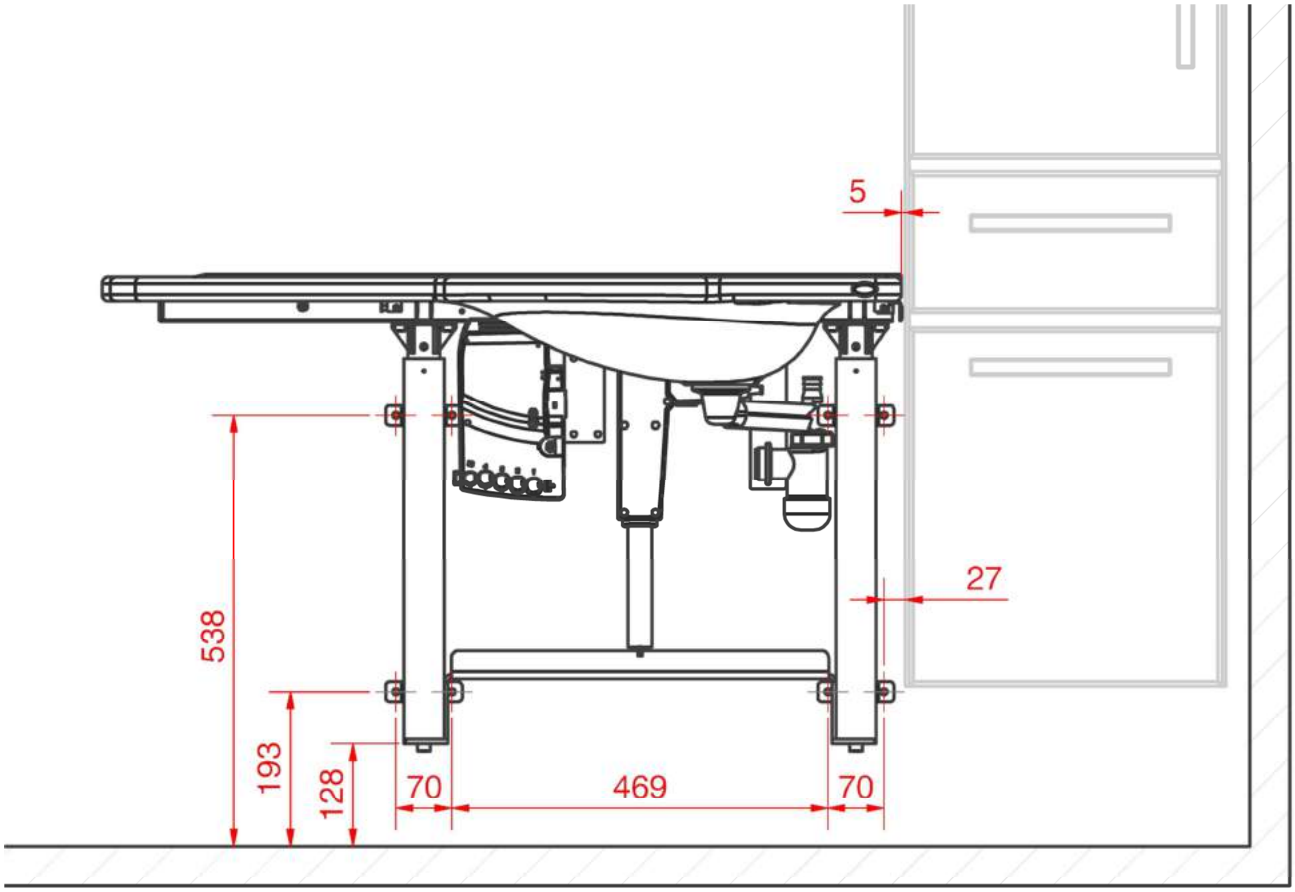

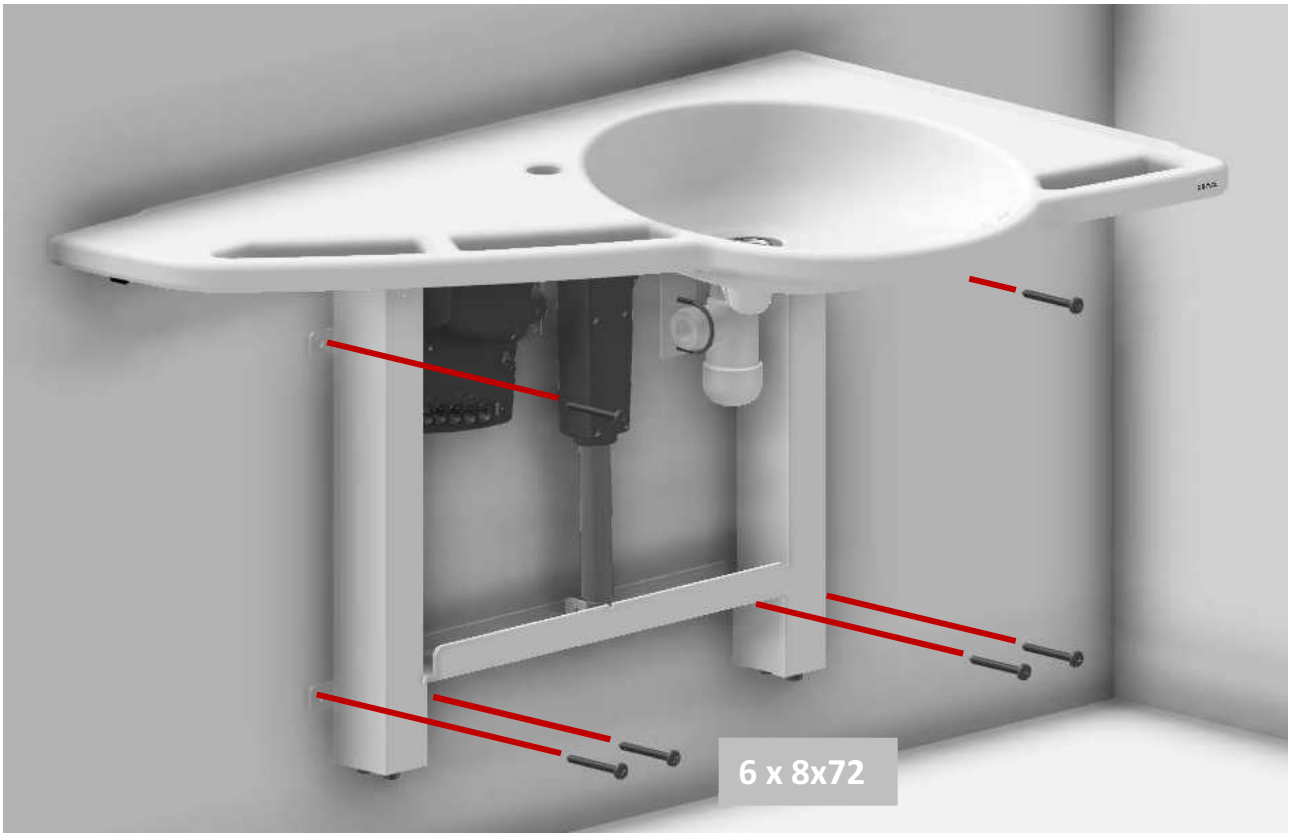

NOTE: Depending wall type, choose other suitable screws, as required.
Max. load on upper screws: 71 kg/screw

© ROPOX 2014

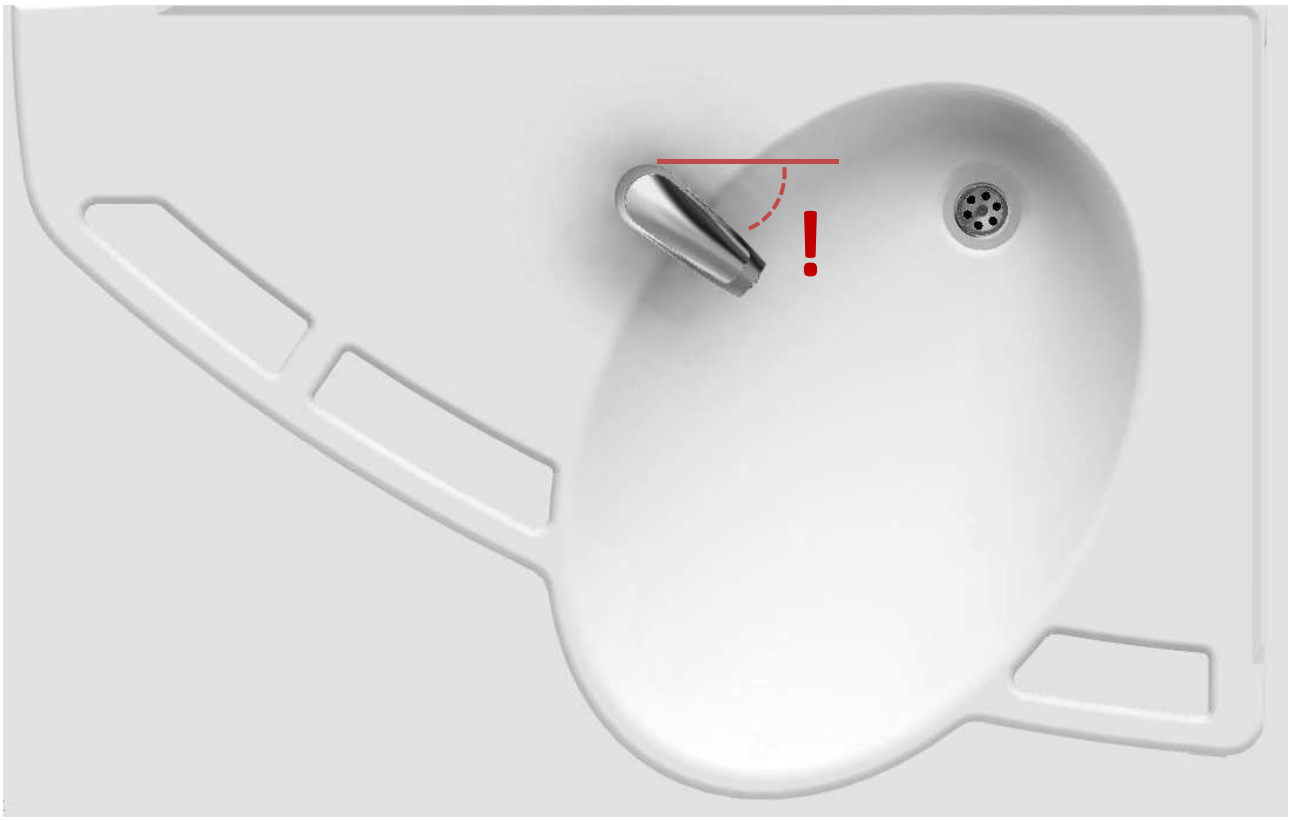

© ROPOX 2014

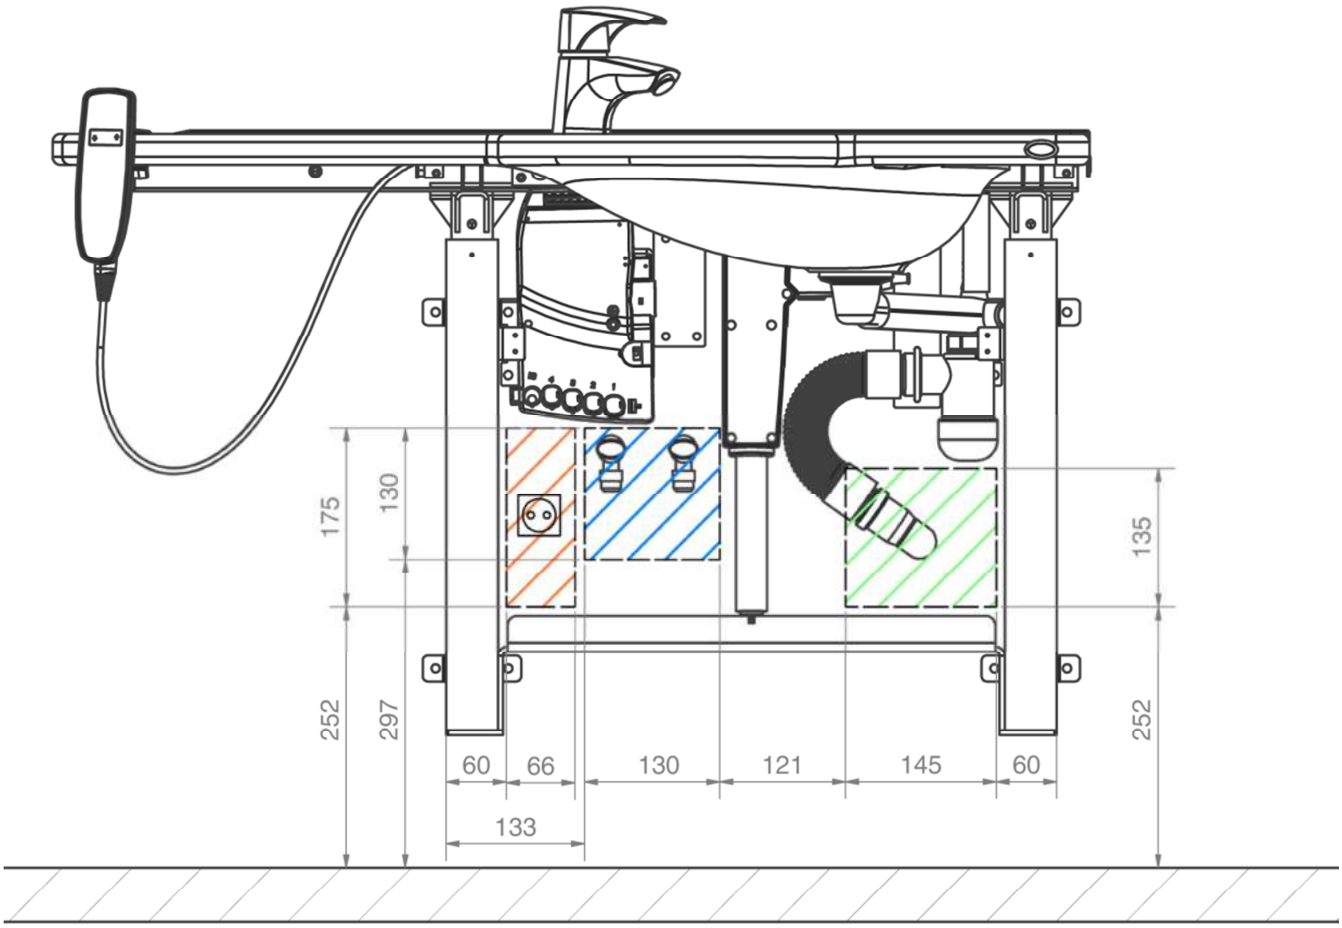

Fixate excess cables

Recommended placement of electrical installation

© ROPOX 2014

Wiring diagram

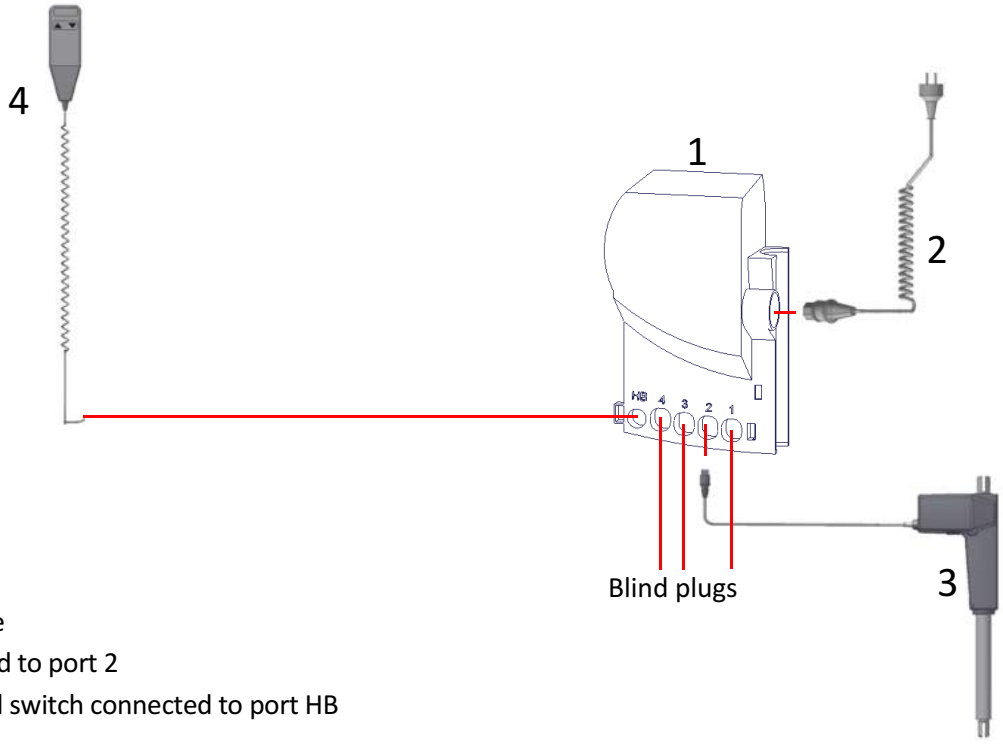

1. Control unit
2. 230V mains cable
3. Motor, connected to port 2
4. Handheld control switch connected to port HB

Adjust the washbasin to its highest and lowest position to make sure the wires and hoses are mounted correctly and do not conflict during the adjustment.

Mounting of covers

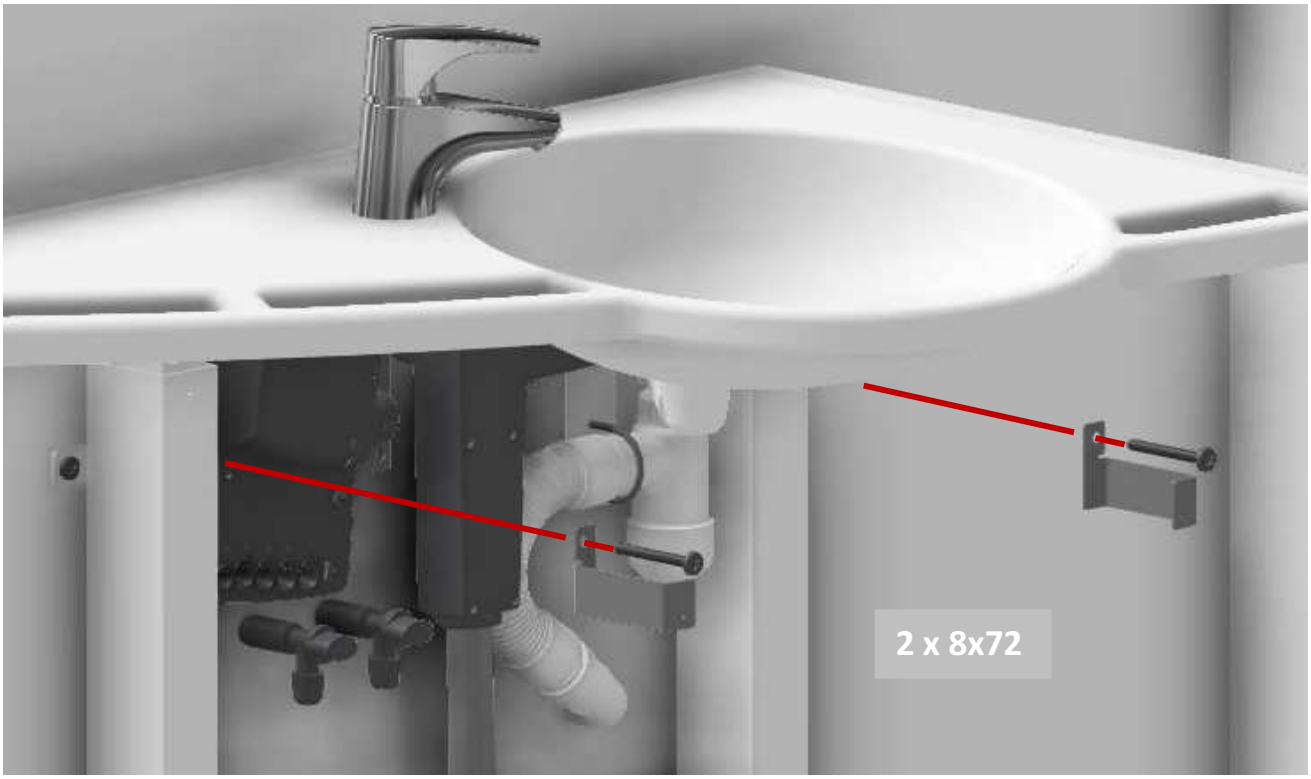

© ROPOX 2014

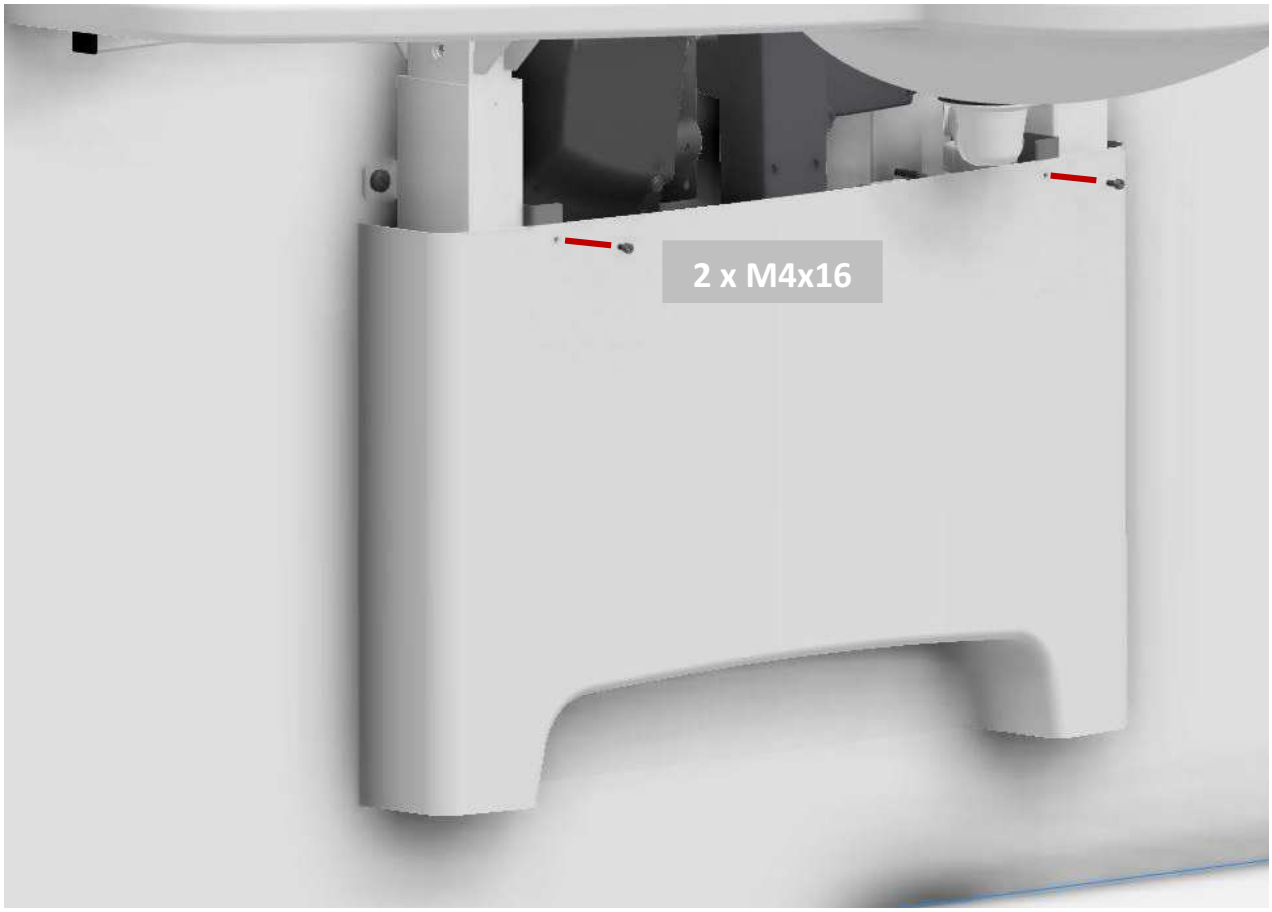

© ROPOX 2014

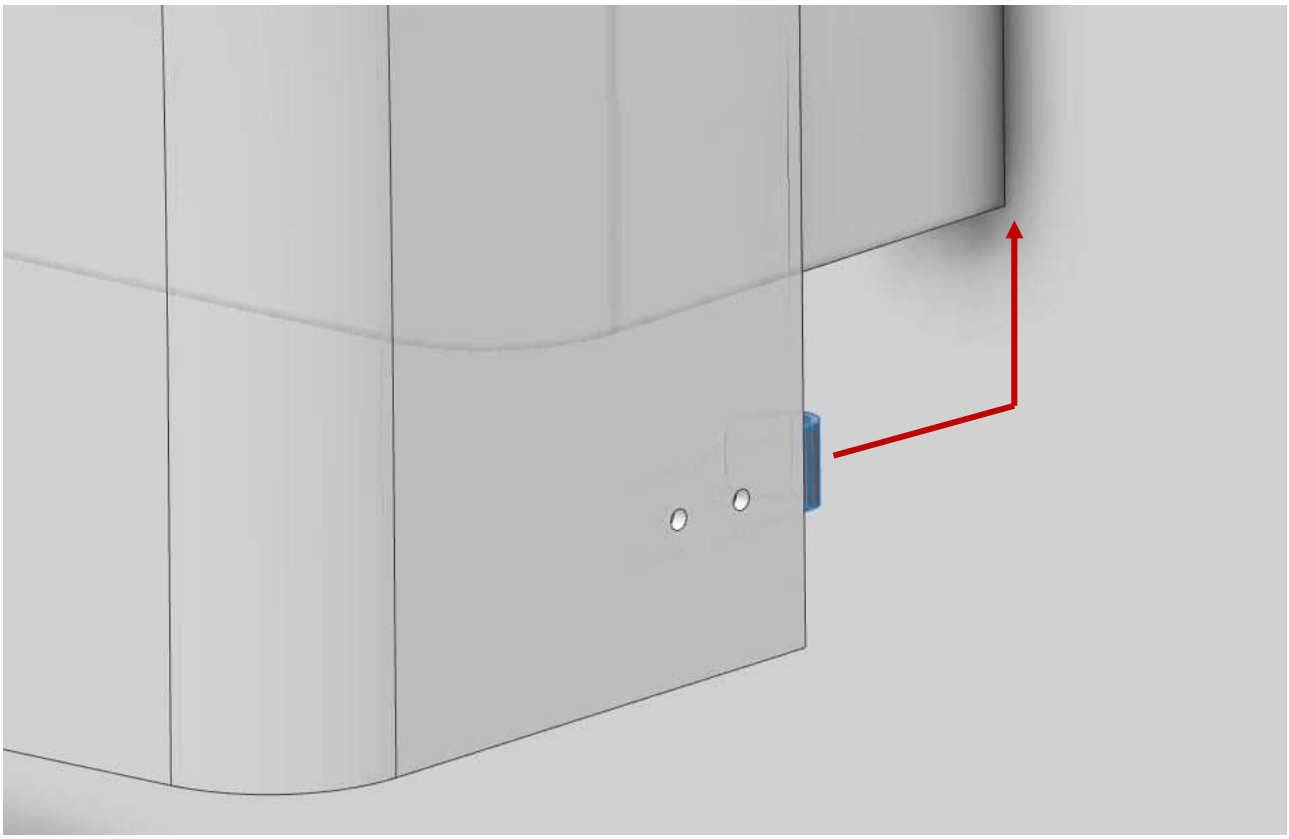

© ROPOX 2014

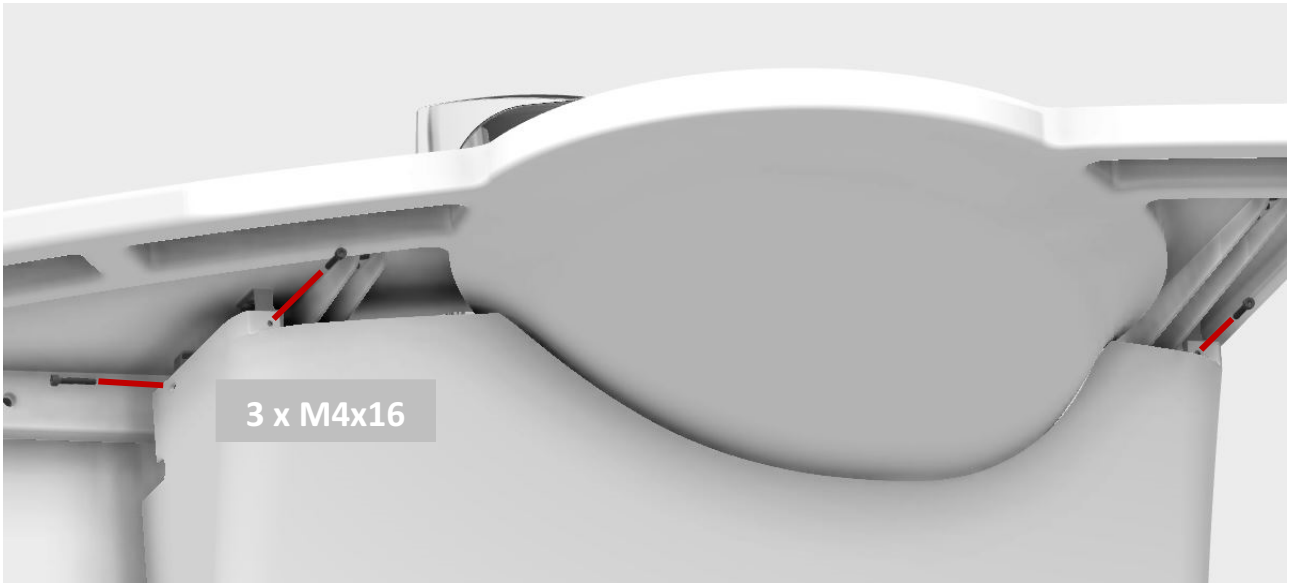

© ROPOX 2014

Support Washbasin Electric, right

40-44017

NOTE:
Make sure the washbasin does not get scratched while upside down.

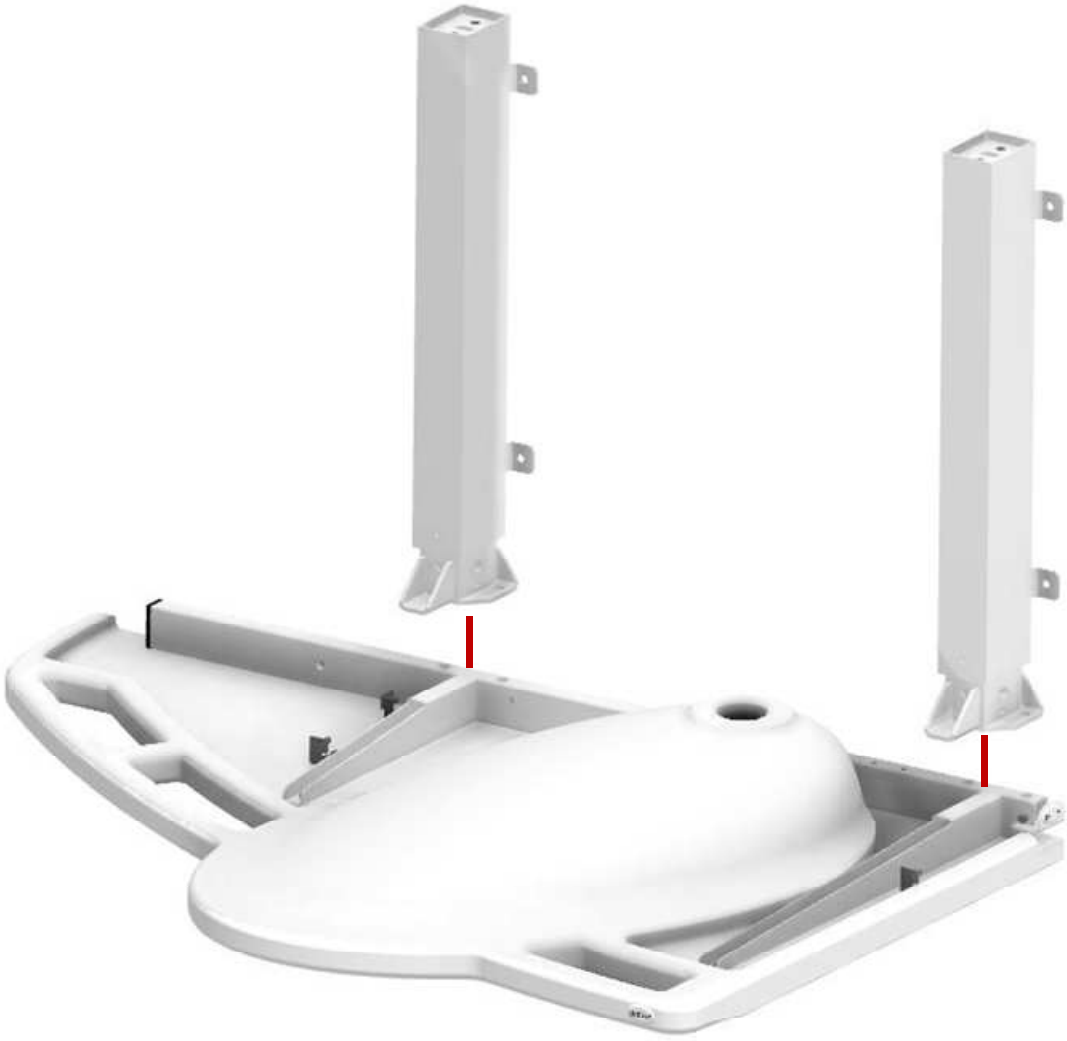

© ROPOX 2014

© ROPOX 2014

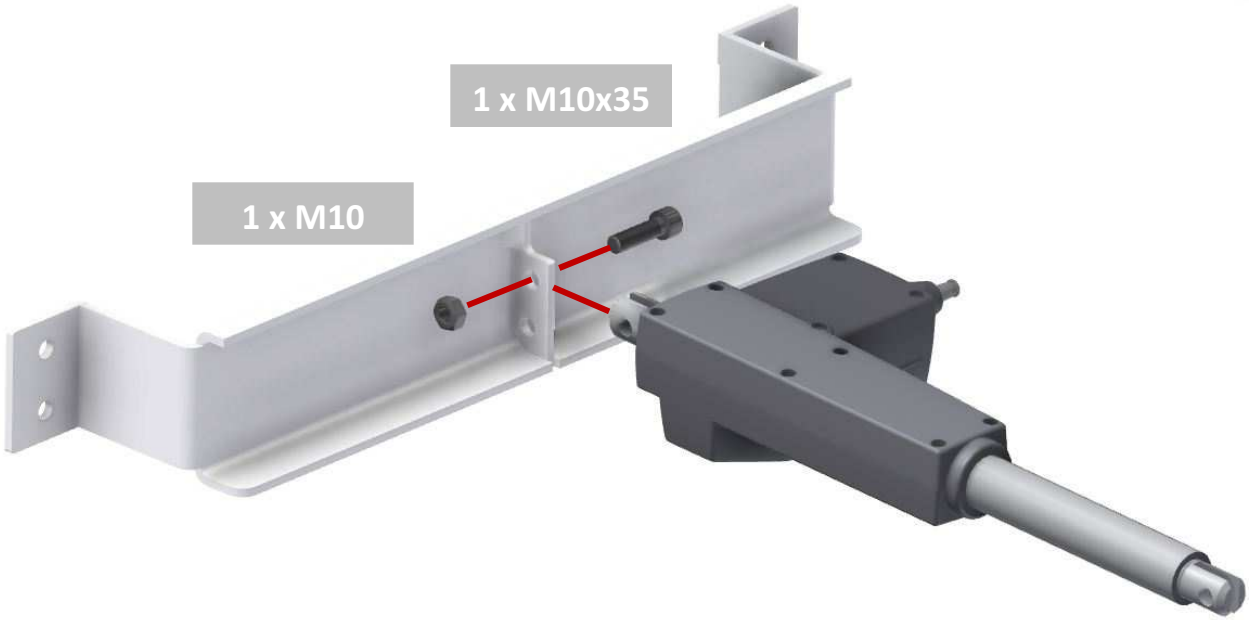

© ROPOX 2014

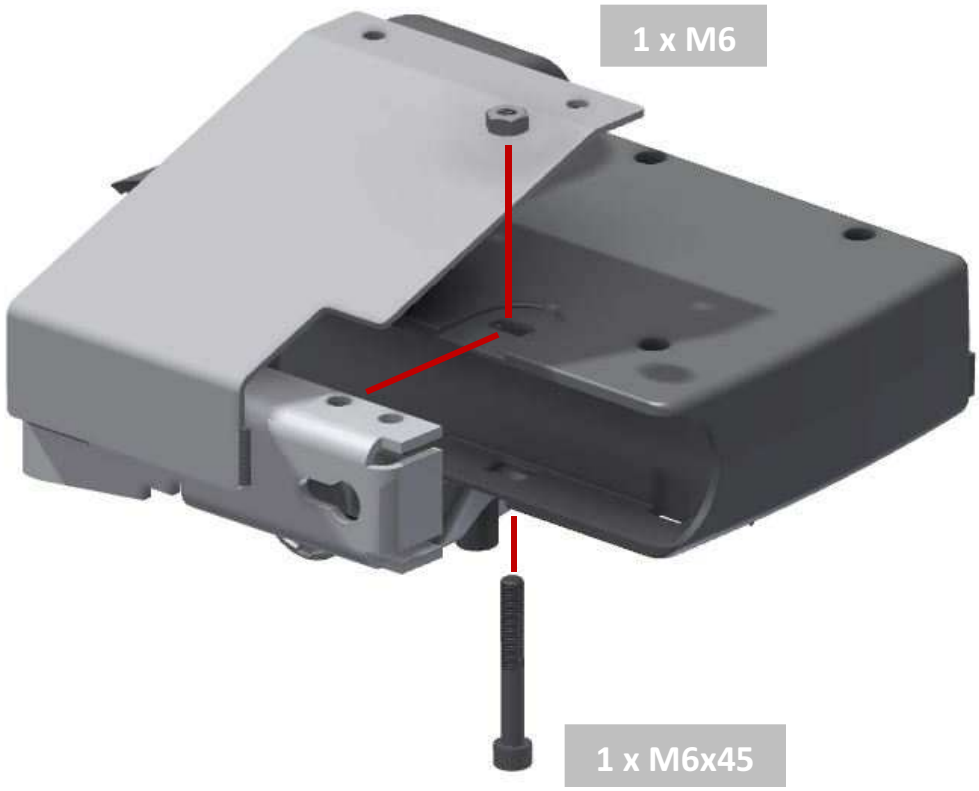

© ROPOX 2014

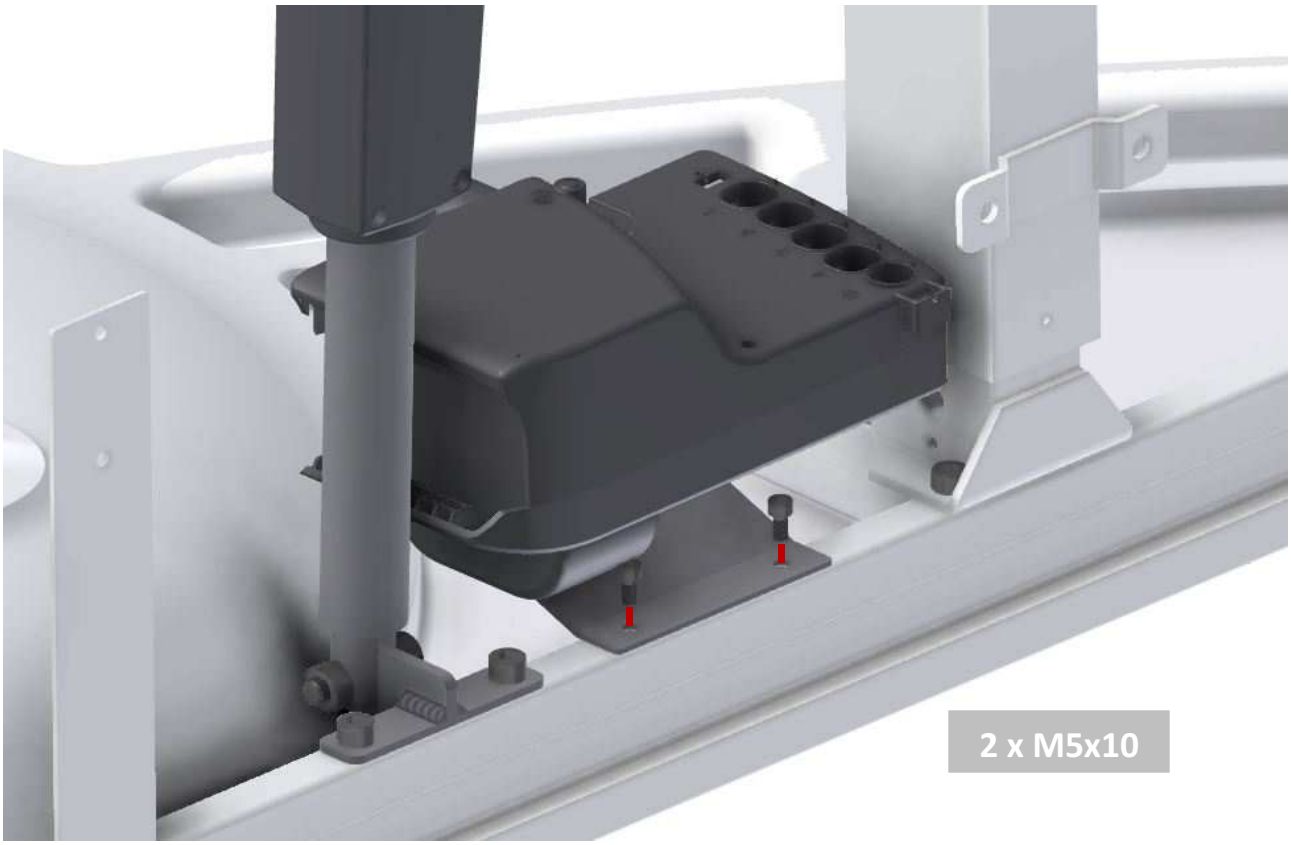

© ROPOX 2014

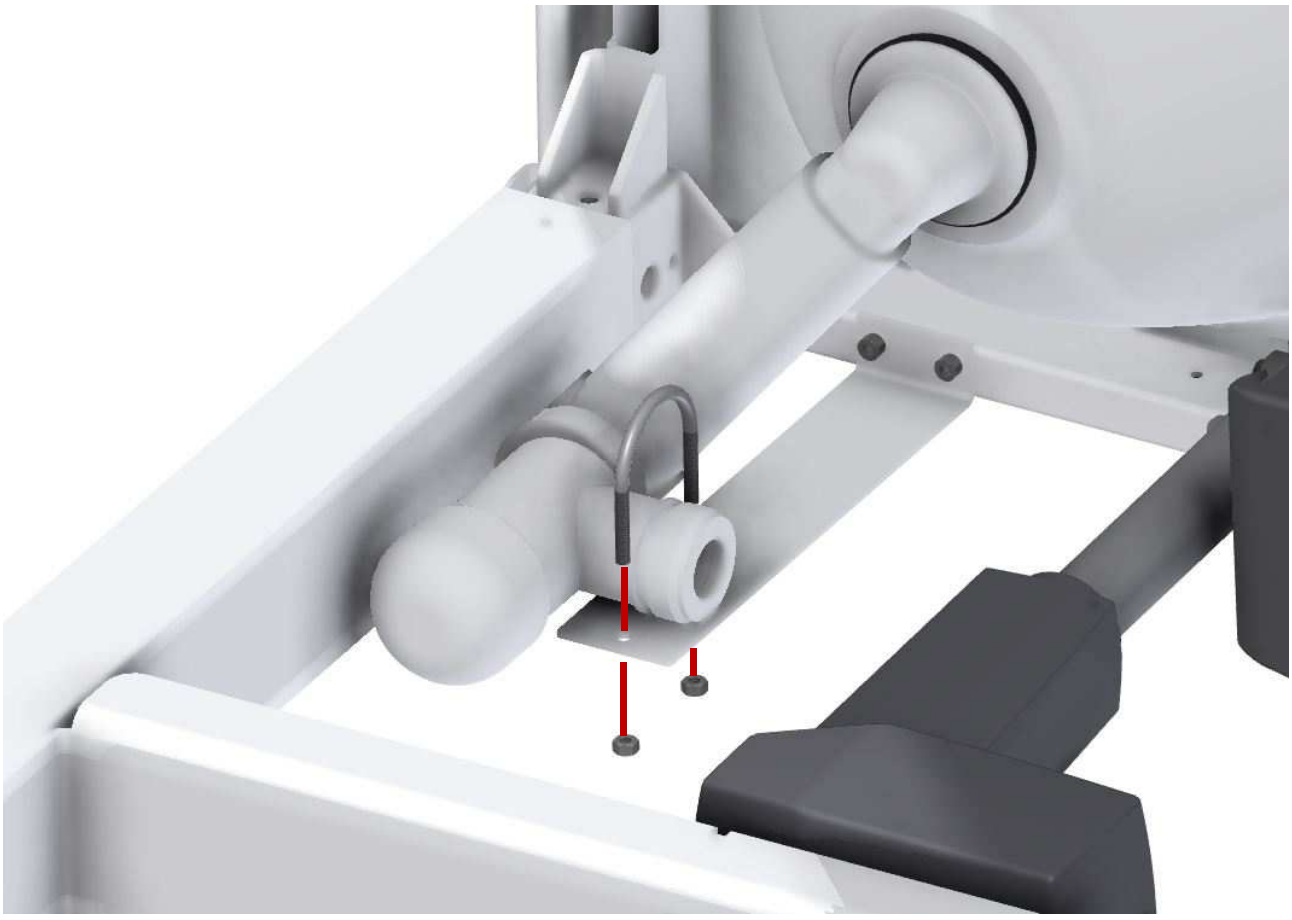

© ROPOX 2014

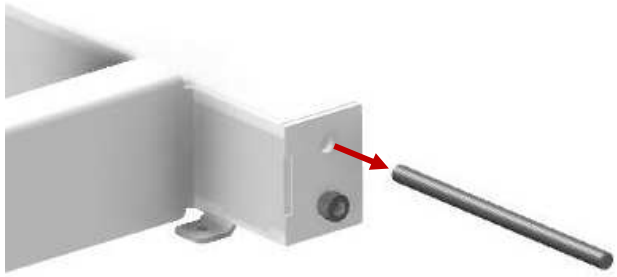

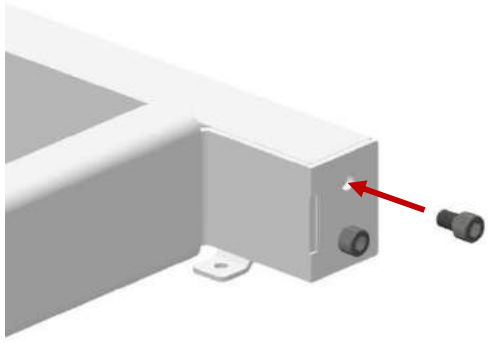

© ROPOX 2014

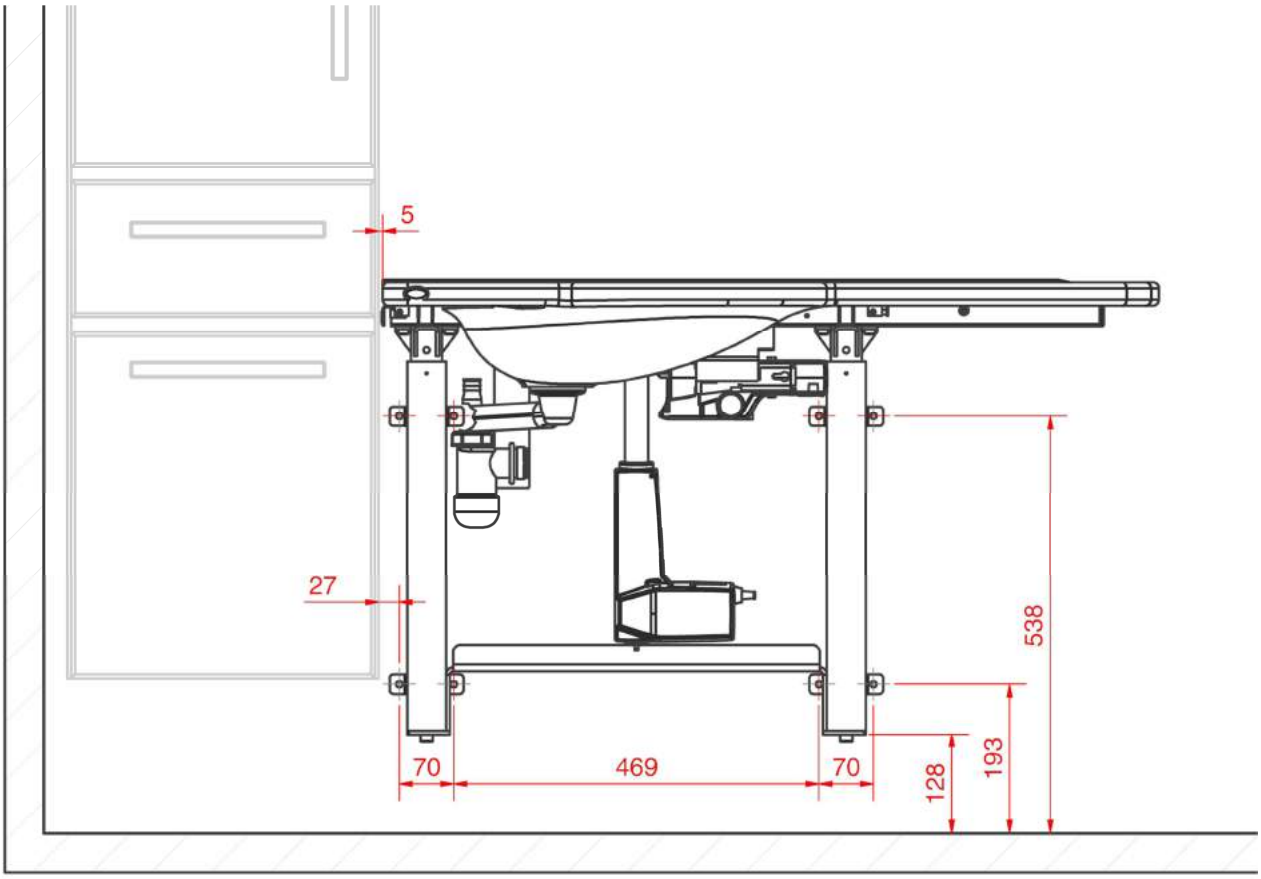

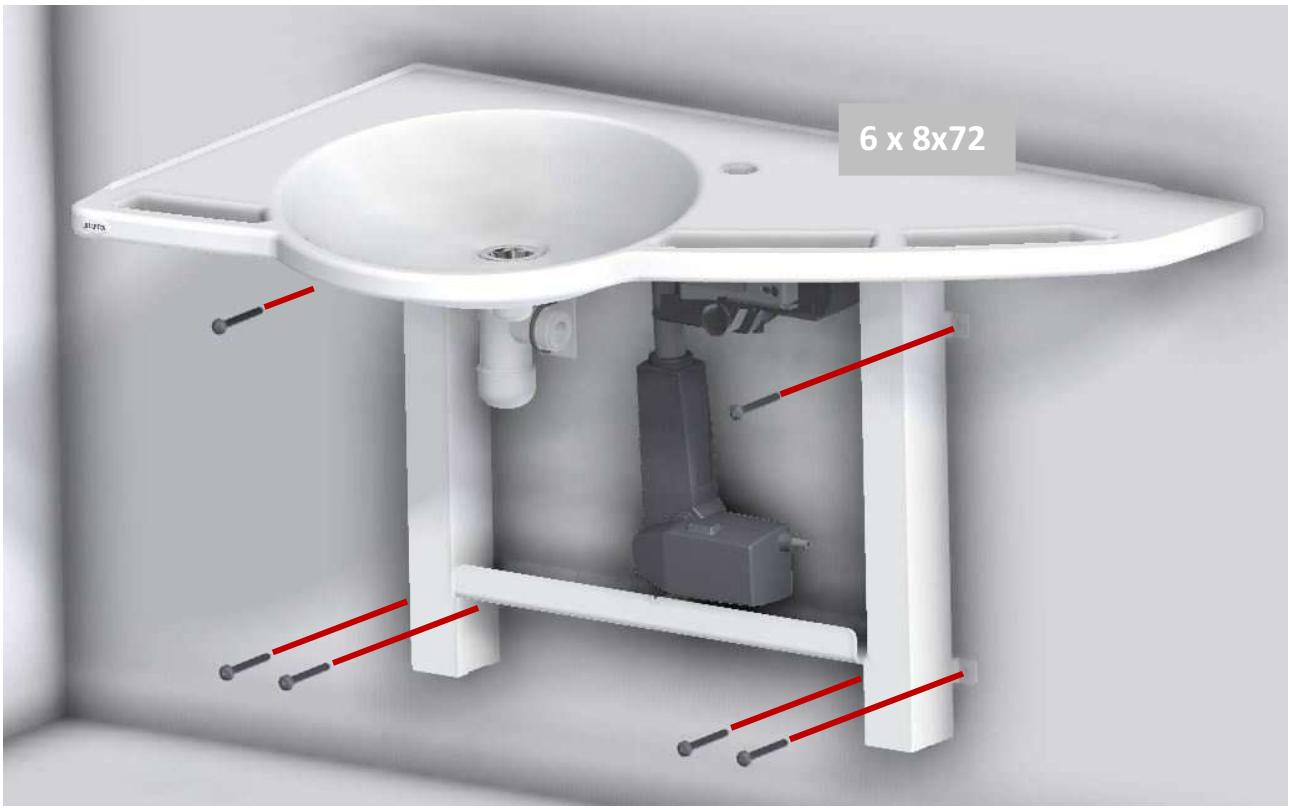

NOTE: Depending wall type, choose other suitable screws, as required.
Max. load on upper screws: 71 kg/screw

© ROPOX 2014

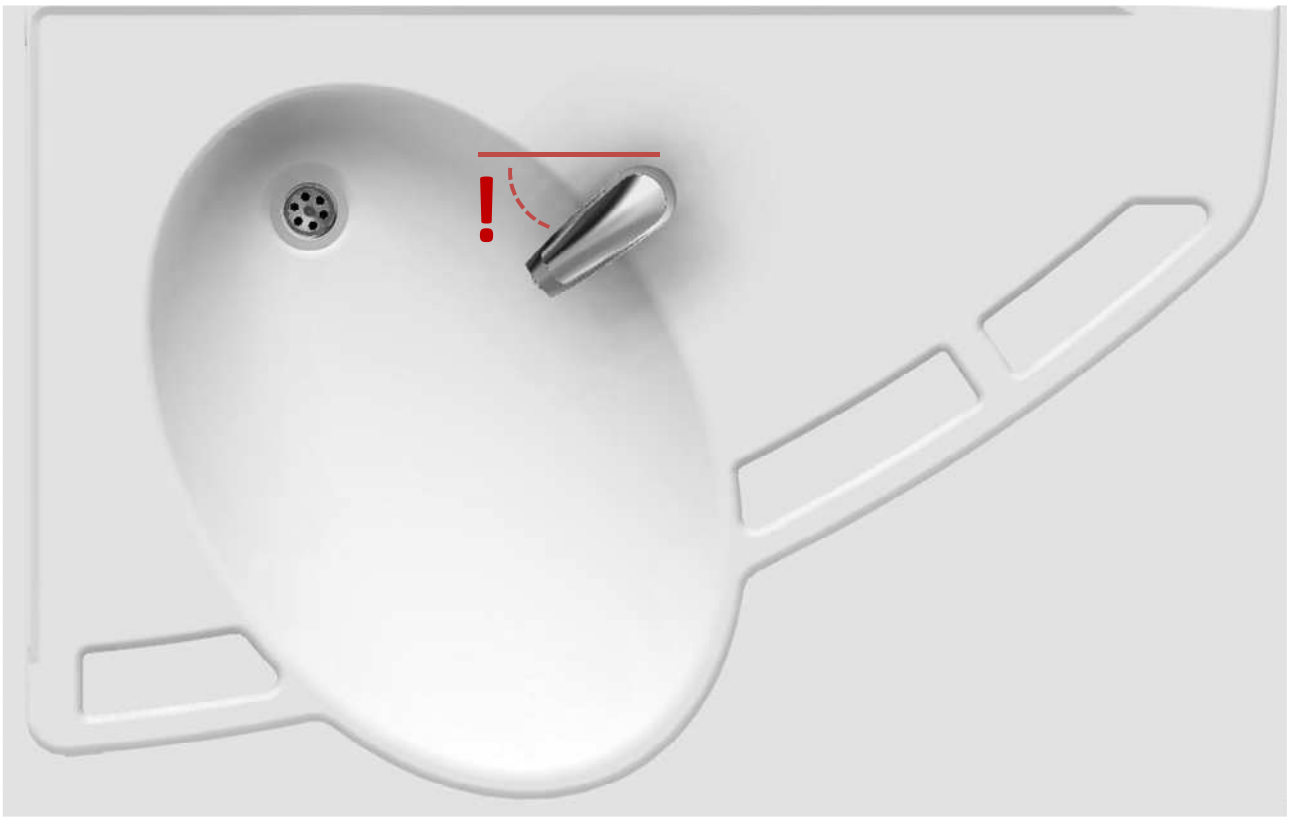

© ROPOX 2014

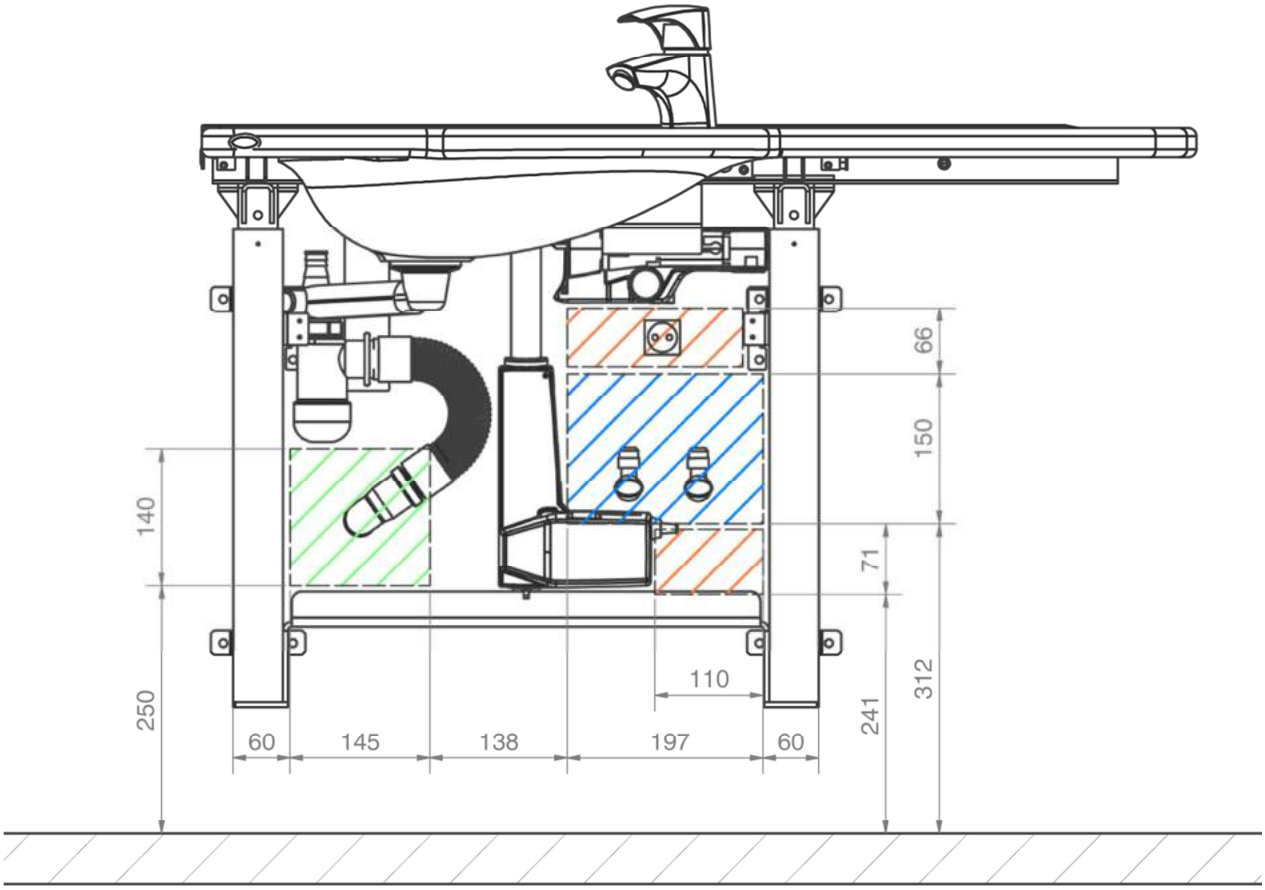

Recommended fixation of the hoses and wires

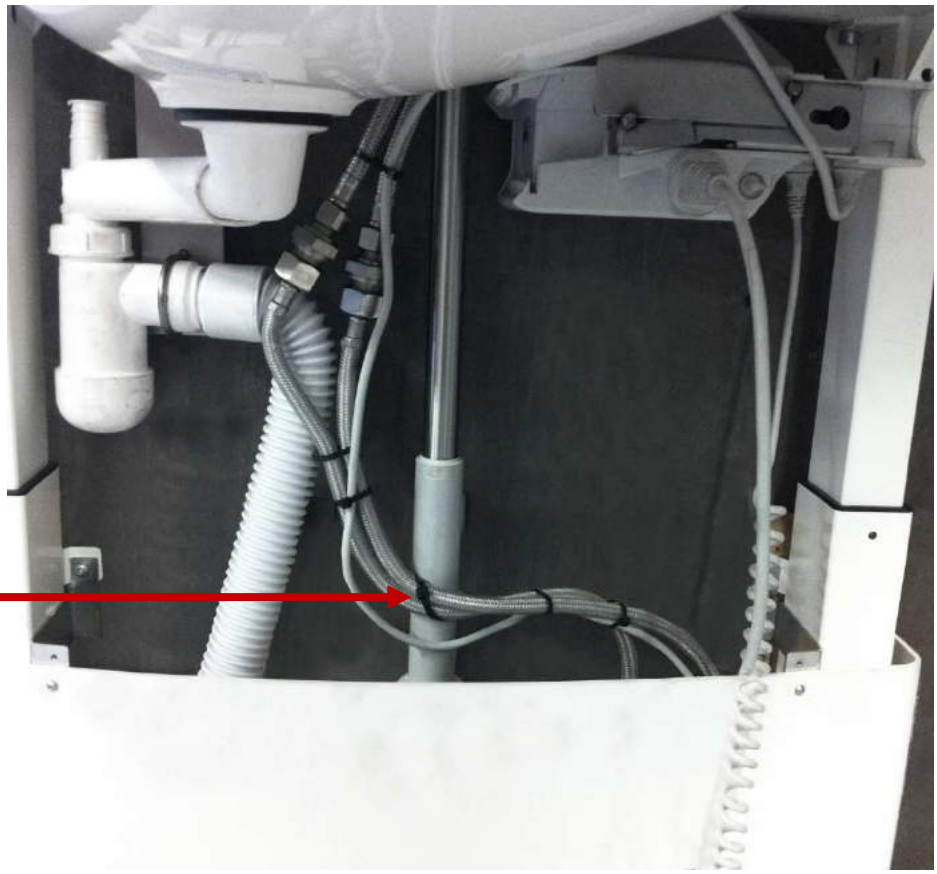

© ROPOX 2014

Wiring diagram

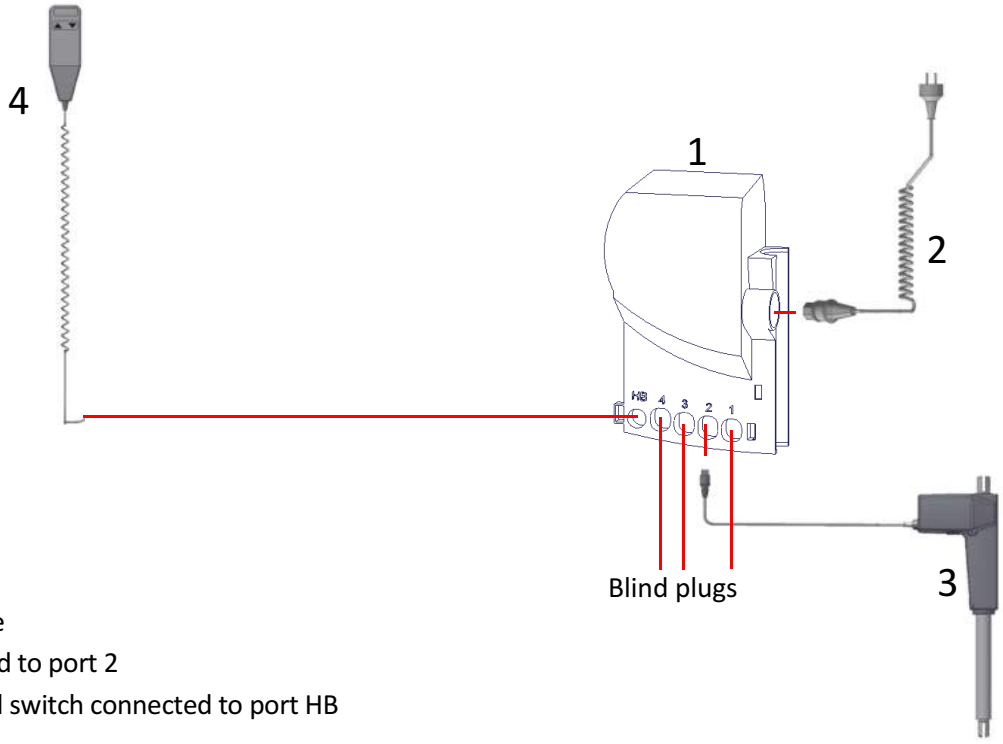

1. Control unit
2. 230V mains cable
3. Motor, connected to port 2
4. Handheld control switch connected to port HB

Adjust the washbasin to its highest and lowest position to make sure the wires and hoses are mounted correctly and do not conflict during the adjustment.

Mounting of covers

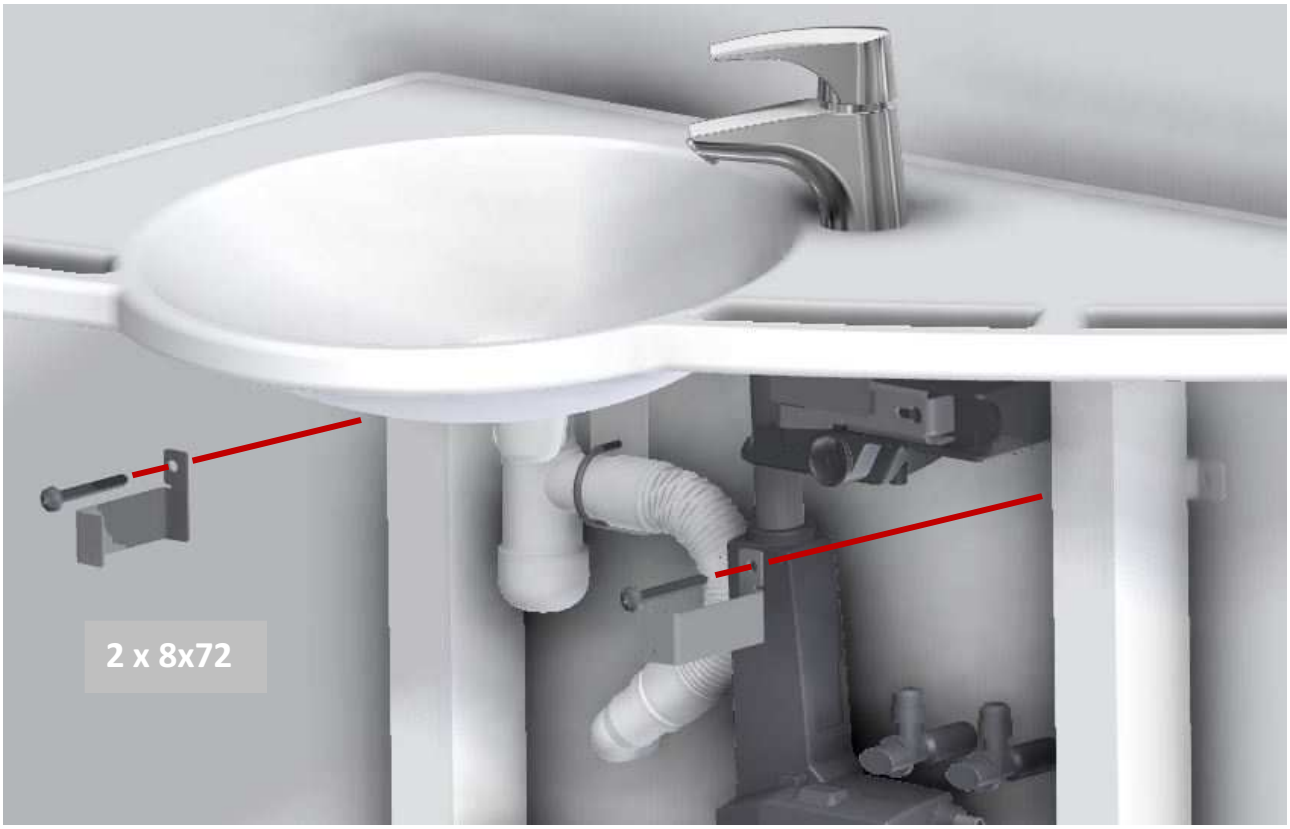

© ROPOX 2014

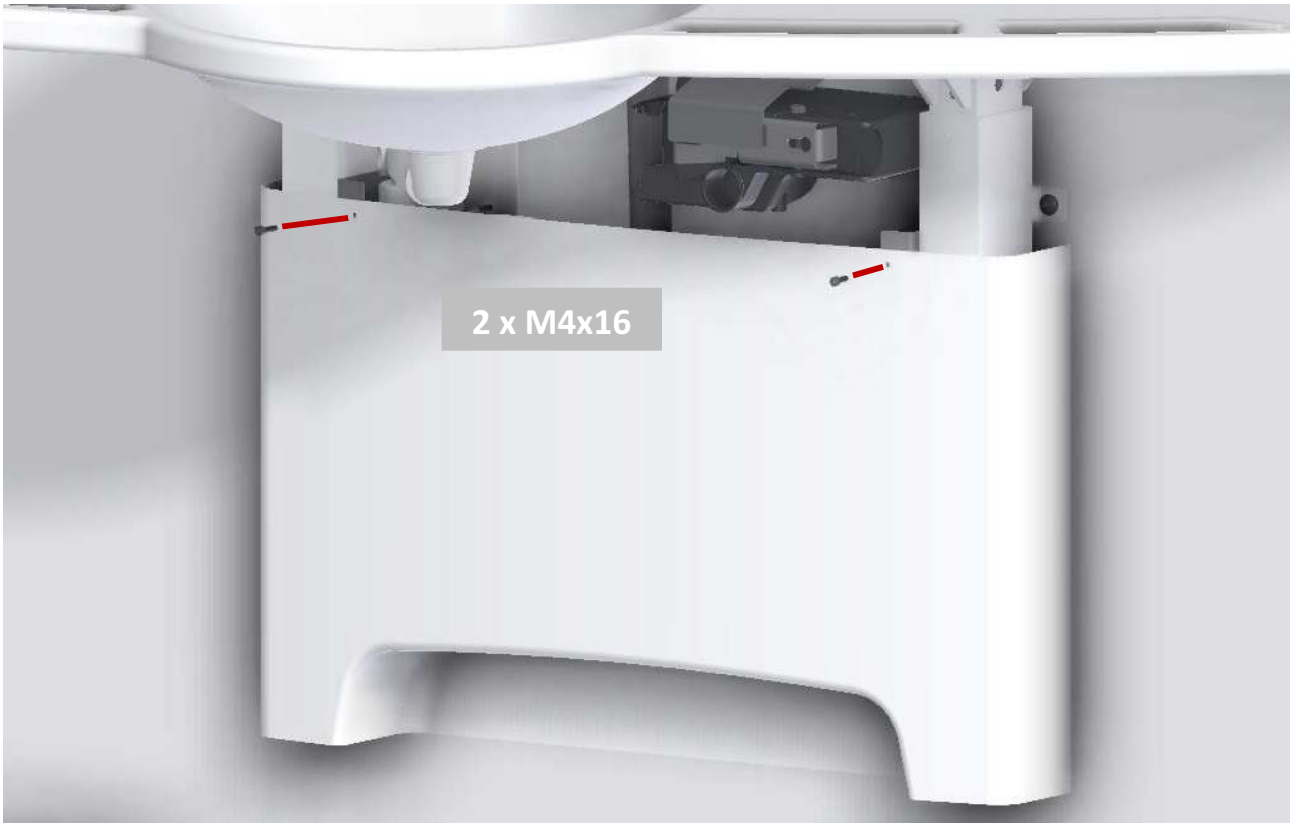

© ROPOX 2014

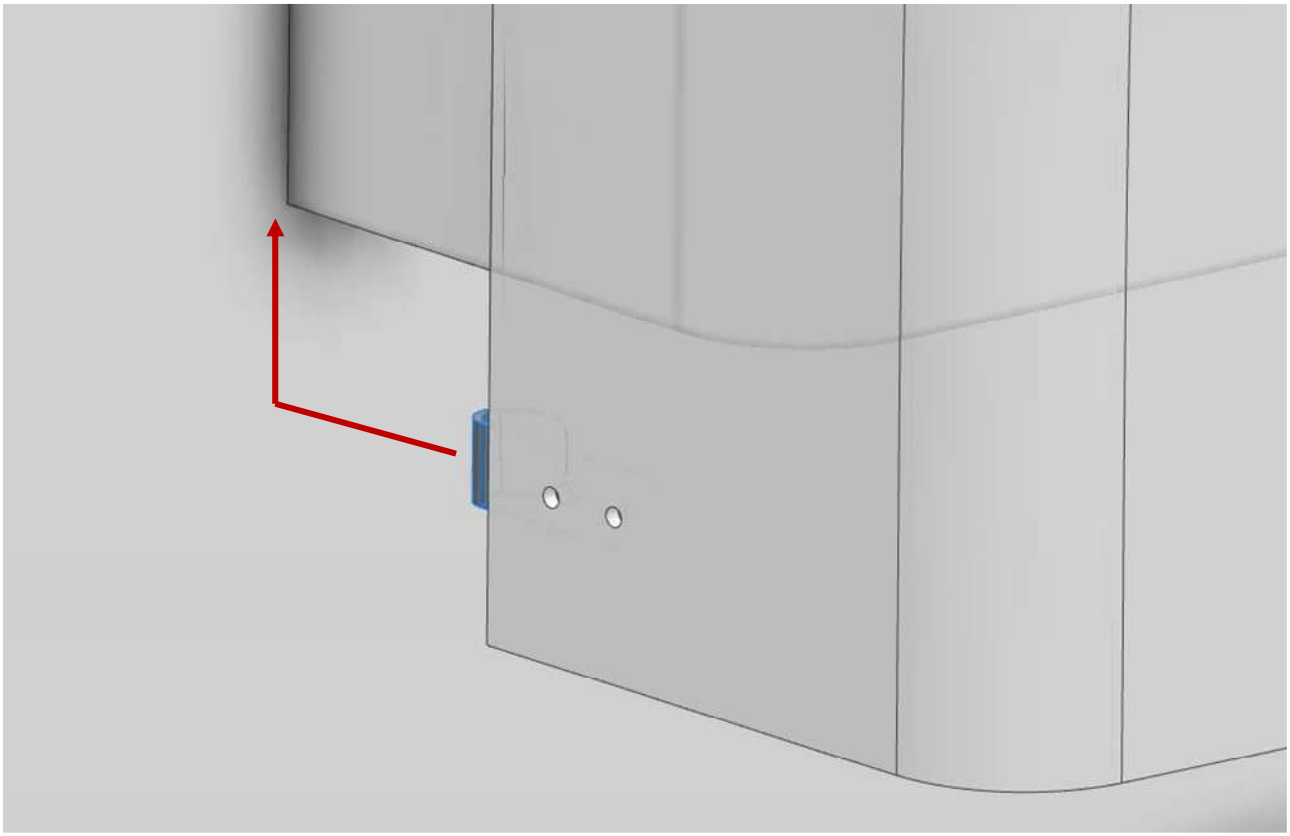

© ROPOX 2014

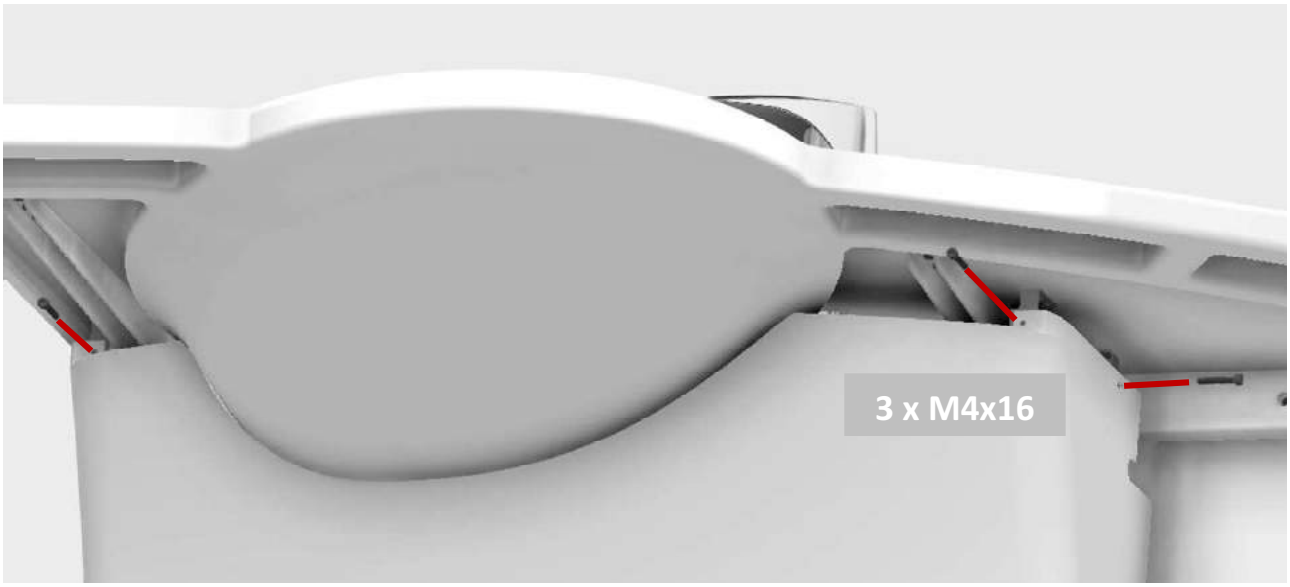

© ROPOX 2014

List of components

Ropox Support Washbasin Electric, left, 40-44016:

40*44010-064:	Top plate with washbasin, left-oriented	1 (one)	
Incl.	Top frame, left oriented	1 (one)	
30-67636:	Flexi legs	2 (two) sets	
40*44016-003:	Motor bracket	1 (one)	
40*44016-023:	Siphon plate	1 (one)	
40*44016-012:	Bottom bracket	1 (one)	
40*44016-003:	Motor	1 (one)	
40*44016-008:	Control box bracket	1 (one)	
97000421:	Control box CB6	1 (one)	
40*44016-024:	Siphon hanger	1 (one)	
40*44010-094:	Adjustment foot M10	2 (two)	

© ROPOX 2014

97001655:	Hand control	1 (one)	
97000474:	Motor cable L=1000mm	1 (one)	
97000429:	Blind plugs	3 (three)	
97000427:	Control box cable	1 (one)	
97001601:	Siphon	1 (one)	
97001125:	Connecting hose, ½” x ½”, 50 cm	2 (two)	
97001012:	Coupling piece 1/2"to 3/8"	2 (two)	
97001035:	ø32x88.5° angle	2 (two)	
97001162:	Flexible drain hose ø32/32 pipe stub	1 (one)	

© ROPOX 2014

List of components

Ropox Support Washbasin Electric, right, 40-44017:

40*44010-070:	Top plate with washbasin, right-oriented	1 (one)	
Incl.	Top frame, left oriented	1 (one)	
30-67636:	Flexi legs	2 (two) sets	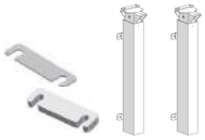
40*44016-003:	Motor bracket	1 (one)	
40*44016-023:	Siphon plate	1 (one)	
40*44016-012:	Bottom bracket	1 (one)	
40*44016-003:	Motor	1 (one)	
40*44016-022:	Control box bracket	1 (one)	
97000421:	Control box CB6	1 (one)	
40*44016-024:	Siphon hanger	1 (one)	
40*44010-094:	Adjustment foot M10	2 (two)	

97001655:	Hand control	1 (one)	
97000474:	Motor cable L=1000mm	1 (one)	
97000429:	Blind plugs	3 (three)	
97000427:	Control box cable	1 (one)	
97001601:	Siphon	1 (one)	
97001125:	Connecting hose, ½” x ½”, 50 cm	2 (two)	
97001012:	Coupling piece 1/2"to 3/8"	2 (two)	
97001035:	ø32x88.5° angle	2 (two)	
97001162:	Flexible drain hose ø32/32 pipe stub	1 (one)	

© ROPOX 2014

Optional extras

40-44023 Cover kit, left

Incl.

40*44010-085	Covers, left-oriented	1 set

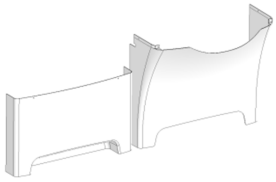

40*44010-111	Brackets for bottom cover	1 set

40*44010-059	Mounting fittings for top cover	3 (three)

Mounted on washbasin

40-44024 Cover kit, right

Inkl.

40*44010-086	Covers, right-oriented	1 set

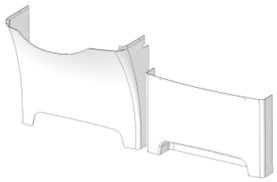

40*44010-111	Brackets for bottom cover	1 set

40*44010-059	Mounting fittings for top cover	3 (three)

Mounted on washbasin

40-44026 Fixed control switch

97001671	DPH control switch	1 (one)

Incl. cover, mounted on washbasin

97001410	Modular Junction box	1 (one)

Incl. 3 stk. Blind plugs, mounted on top frame

97000440	Communication cable MJB-CB6	3 (three)

© ROPOX 2014

Optional extras

40-44040	**Mixer tap, Oras Saga:**	1 (one)	
Incl.			
97001012	Coupling piece ½”x3/8”	2 (two)	

40-14680	**Auxiliary lever for Oras Saga mixer tap** Grip length 15 cm from center	1 (one)	

40-44044	**Mixer tap, Damixa Clover Easy**	1 (one)	
Incl.			
97001101	Coupling piece 10x½”	2 (two)	

40-44045	**No-touch mixer tap** Oras Electra 6250F	1 (one)	
Incl.			
97001012	Coupling piece ½”x3/8”	2 (two)	

40-40935	**Ropox overflow plug**	1 (one)	

© ROPOX 2014